## Use and Care Manual - Shower/Bathtub Door

## **HERMITAGE BATH**

## **Installation Precautions**

- 1. Ensure a Level and Plumb Base: The installation surface (wall and floor) must be perfectly level, plumb, and structurally sound. Any unevenness can prevent proper door operation and compromise safety.
- 2. Precise Measurement is Critical: Always take final measurements after all tiles and the are fully installed. Measure width, height, and diagonals at multiple points to guarantee accuracy.
- **3.** Use the Right Sealant: Always use a high-quality, 100% silicone, mildew-resistant sealant for all sealing applications. Avoid harsh acids that can damage the hardware and glass edges.

## **Usage Precautions**

- **1.** Gently Open and Close: Slide the door smoothly along the track or swing it gently. Avoid slamming it against the frame or wall to prevent glass damage or hardware loosening.
- 2. Mind the Gap: Keep hands and body clear of the door edges during operation to prevent pinching. Supervise children closely.
- 3. Keep Tracks Clean: Regularly clean the bottom track of sliding doors to remove hair, soap scum, and debris, ensuring smooth operation and preventing derailment.
- **4.** No Heavy Objects: Do not hang towels, robes, or other heavy items on the door handles or the top. Excess weight can strain and damage the hardware.
- 5. Ventilate After Use: Open a window or turn on the exhaust fan after showering to reduce humidity, which helps prevent hardware corrosion and sealant degradation.
- **6.** Clean with Care: Use a soft cloth and a recommended glass cleaner. Avoid abrasive pads, or strong acidic/alkaline cleaners that can scratch the glass or corrode hardware.
- 7. Inspect Seals Periodically: Check the waterproof seals around the frame regularly for signs of aging, cracking, or detachment. Replace them promptly if needed to prevent leaks.
- **8.** Avoid Sharp Impacts: Prevent direct contact with sharp objects (e.g., hooks, tools) on the glass surface during cleaning or use to avoid scratches or damage.
- **9.** Address Unusual Noises: If scraping, squeaking, or sticking occurs, immediately inspect the rollers, track, and hinges. Apply a suitable lubricant or contact customer support.

**10.**Check Hardware Regularly: Periodically inspect all screws, hinges, and fittings for tightness. Tighten them if necessary to ensure the door remains secure.

**Disclaimer:** Installation and/or use of this product constitutes the user's full reading, understanding, and unconditional acceptance of all terms herein. The company shall not bear any legal or financial liability for any direct or indirect losses arising from the violation of any of the above precautions.

