


ASSEMBLY INSTRUCTIONS

55 INCH MIRROR CABINET

HERMITAGE BATH



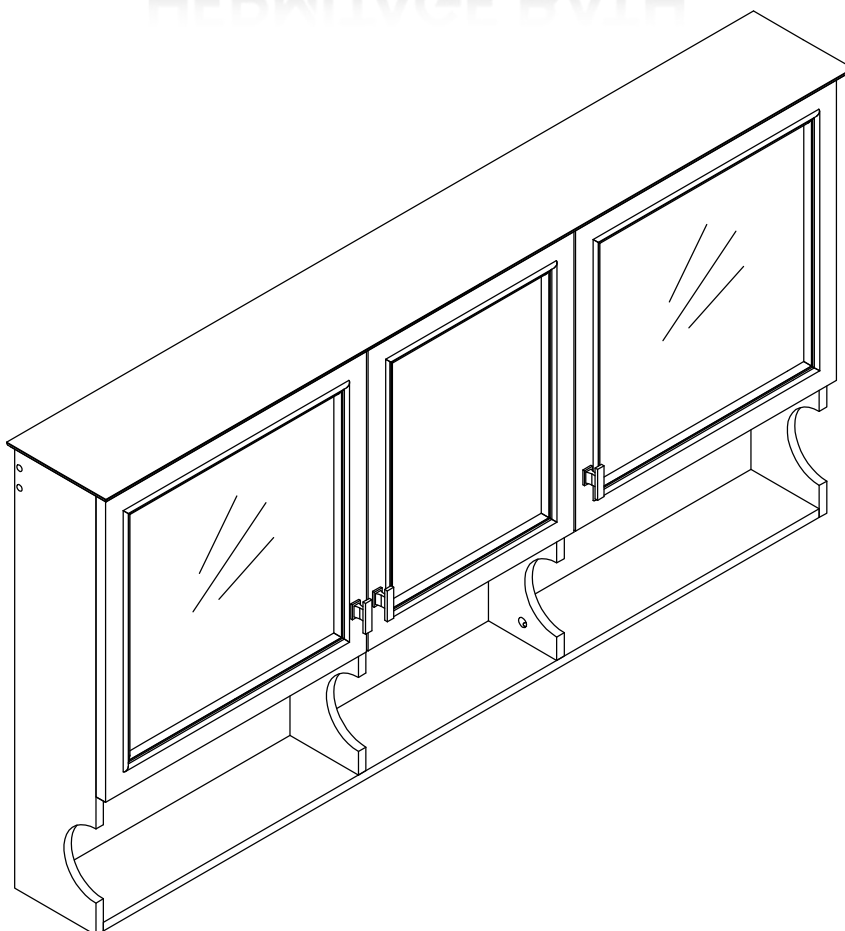


Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Separate, identify and count all parts and hardware.


Compare with the parts list to be sure all parts are present.

"DO NOT TIGHTEN SCREWS UNTIL COMPLETELY ASSEMBLED"


*** Use of power tool to assemble this product will invalidate any claim and damage this product making unsafe !!!**
*** Please assemble on a clean soft surface to avoid damage.**

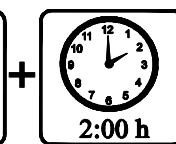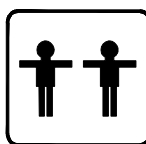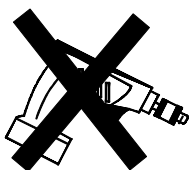

Tools Required



(Not included)



(Not included)

IMPORTANT:

PLEASE READ INSTRUCTION BEFORE STARTING THE ASSEMBLY

Before Installation


Important - Please read these instructions fully before starting assembly

Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts, which may have come loose inside the carton during shipment. Identify and count all items according to the PARTS LIST and/or HARDWARE LIST shown below. Check you have all the components and tools listed on the following pages.


- We recommend that you assemble this product with the assistance of another person; this will make the assembly easier, and will help eliminate damage to the product or injury to persons during assembly.
- Please do not over tighten screws or bolts until the assembly is completed.
- Keep children and animal away from the work area, small parts could choke if swallowed.
- Please put all parts on a non-abrasive floor before assembly, and follow the assembly steps to assemble your newly purchased product correctly and efficiently.

If you find that you have any trouble with assembly or missing or damaged parts please contact the seller.

Cam Lock Assembly Instructions













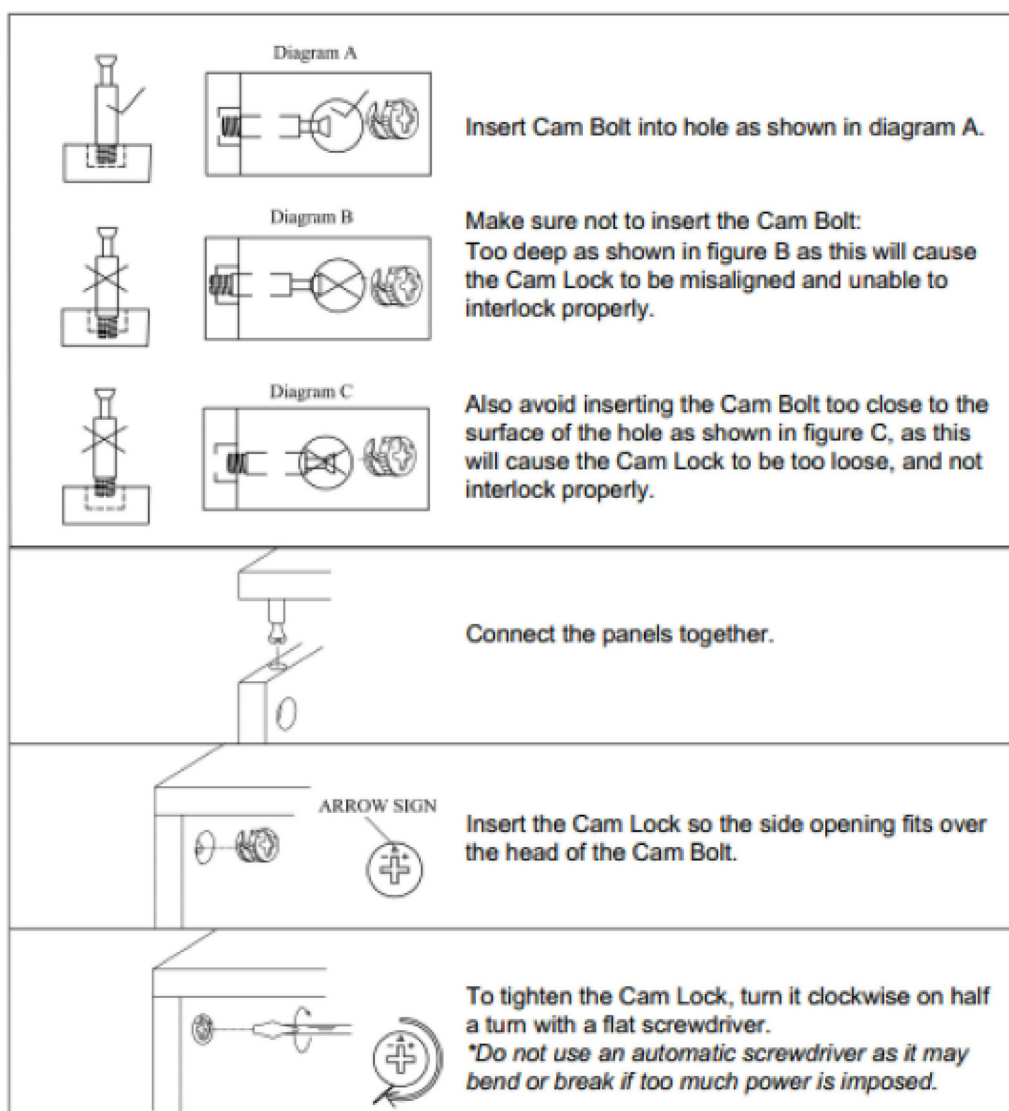


Detail View - CABINET

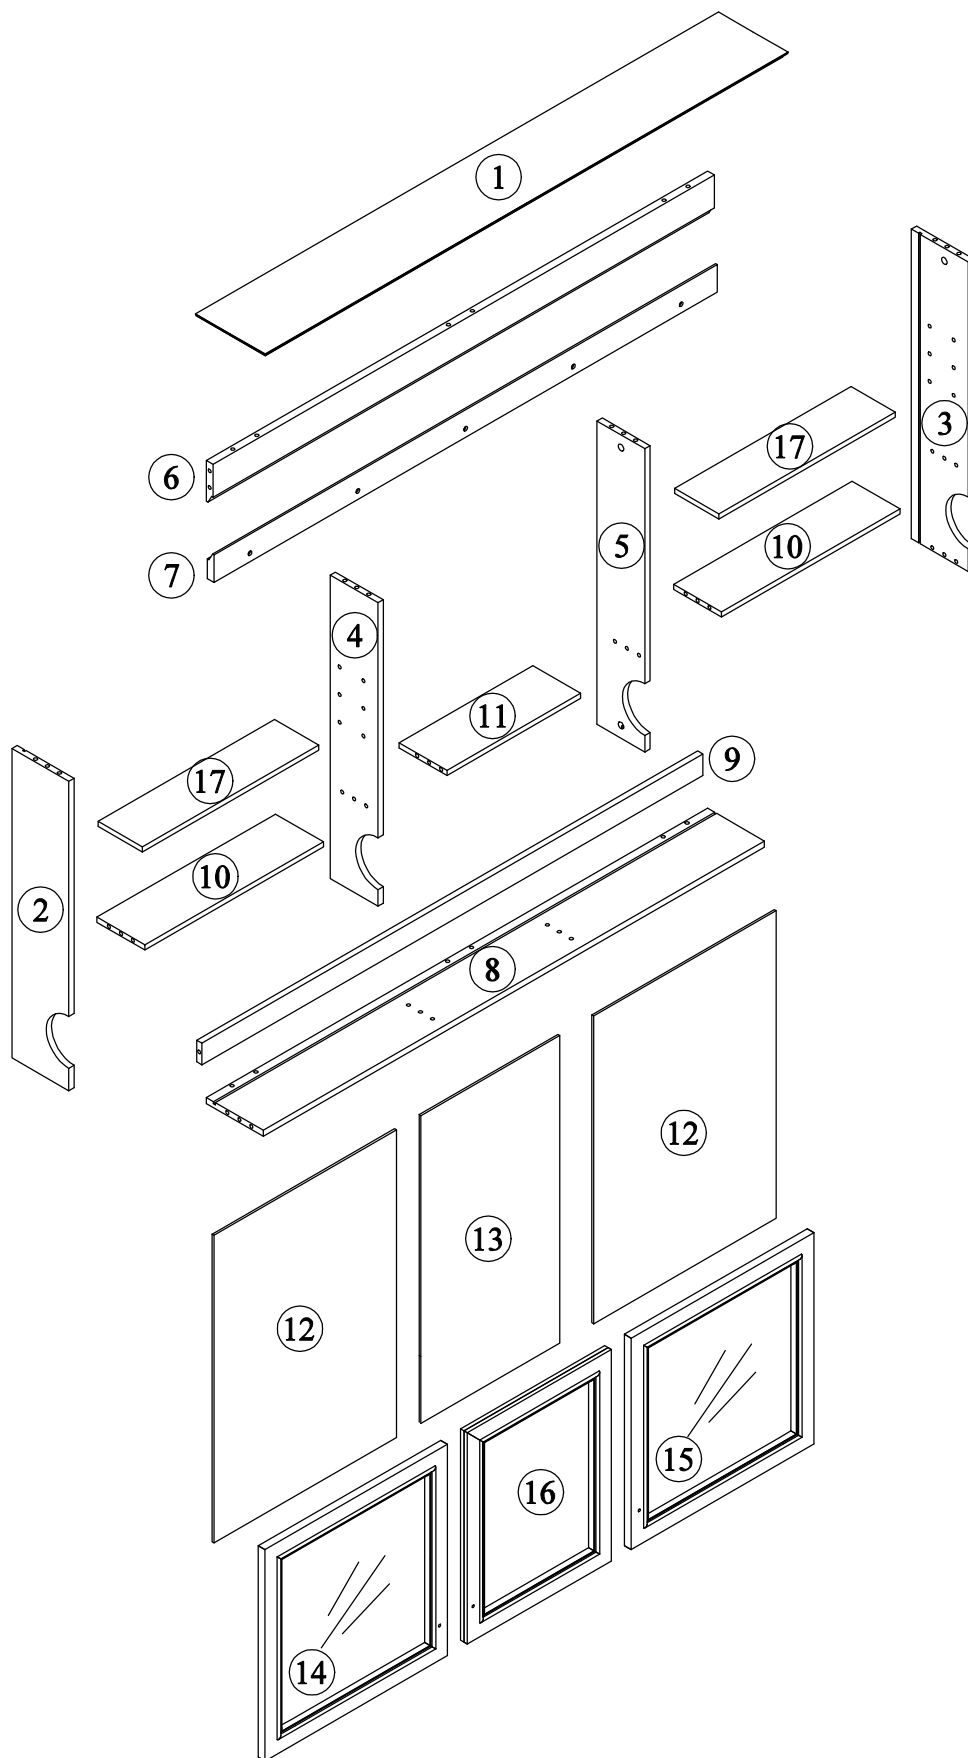


Identifying the Hardware-Identify the hardware using the illustrations below.

Part List - N710P401337

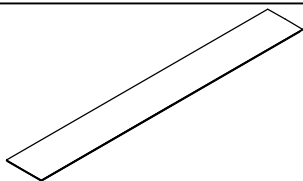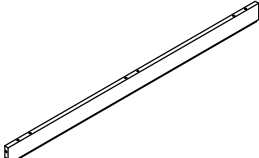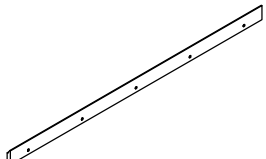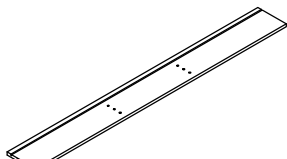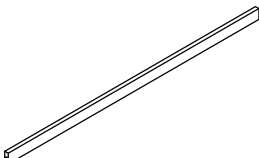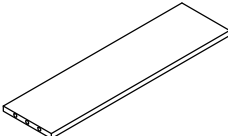1	 Top Panel - 1pc	2	 Side Panel Left - 1pc
3	 Side Panel Right - 1pc	4	 Mid Panel (L) - 1pc
5	 Mid Panel (R) - 1pc	6	 Rear Top Bar - 1pc
7	 Connect Bar - 1pc	8	 Bottom Panel - 1pc
9	 Rear Bar Bottom - 1pc	10	 Mid Panel (L+R) - 2pcs
11	 Mid Panel - 1pc	12	 Back Panel (L+R) - 2pcs
13	 Back Panel Mid - 1pc	14	 Door Cabinet Left - 1pc

Part List - N710P401337

15




Door Cabinet Right - 1pc

16








Door Cabinet Mid - 1pc

17




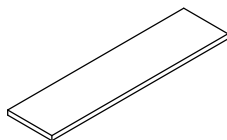


Adjustable Shelf - 2pcs



Hardware List - N710P401337

A  ø6x35mm	B  ø14.5x9mm	C  ø10xø5x50mm
Three in one bolts (22pcs)	Three in one lock (22pcs)	Flat head screw (5pcs)
D  ø12x55mm	E 	F  ø5/32"x20mm
Plastic stopper (5pcs)	Handle (3pcs)	Handle screw (3pcs)
G  ø13x1/4"x50mm	H  ø1/4"x16x1mm	I  ø1/4x10x13mm
Hex-Head bolts (4pcs)	Washer (4pcs)	Horizontal-Hole bolts(4pcs)
J  4mm	K 	L  ø7xø3.5x15mm
Allen key (1pc)	Damping hinge (6pcs)	Flat head screw (36pcs)
M 	N  ø8x30mm	O  ø7xø3.5x15mm
Laminate pad(8pcs)	Wood dowel (34pcs)	Round head screw(4pcs)


STEP: 1

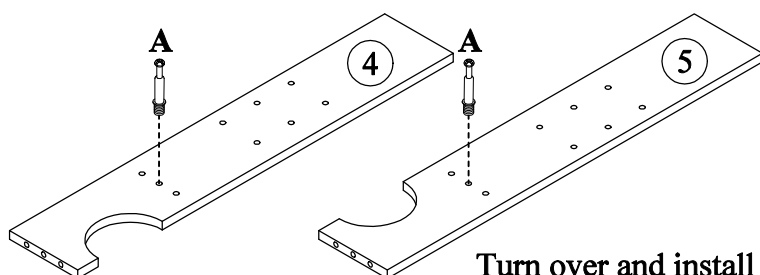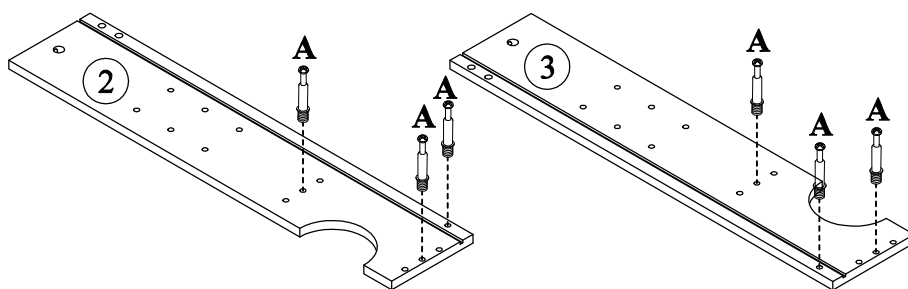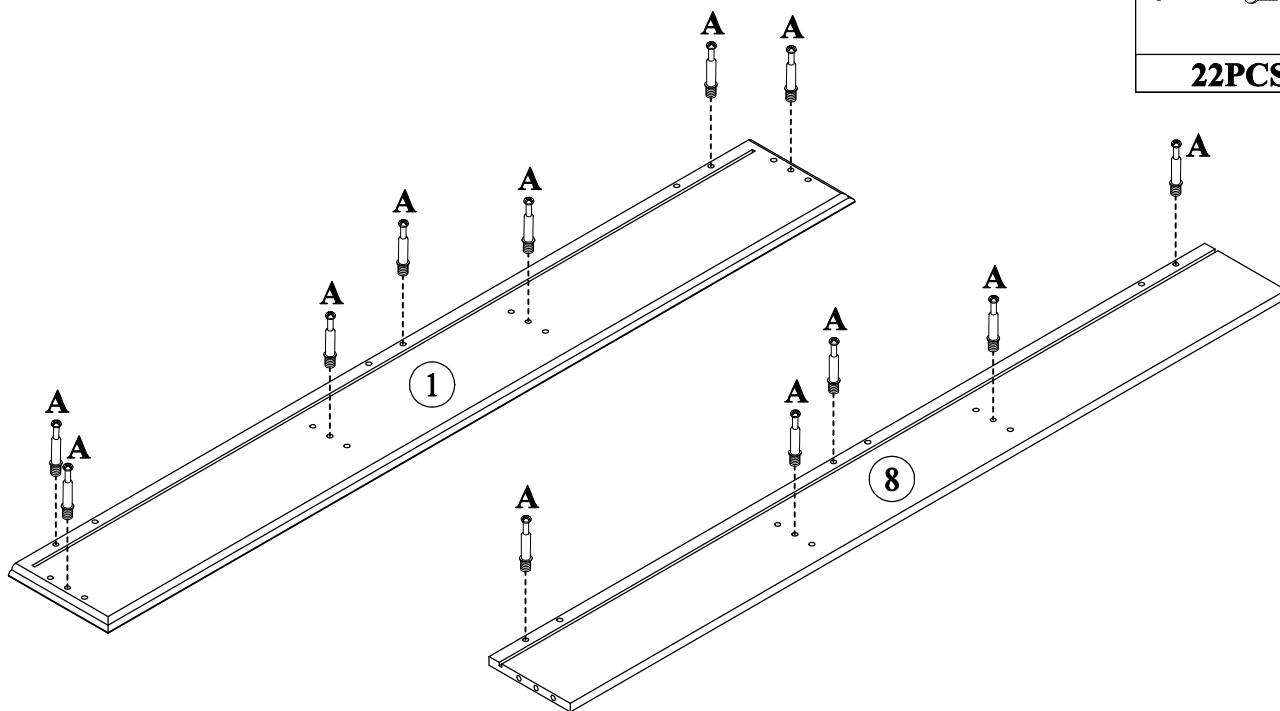
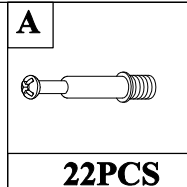


Turn over and install screws (A)

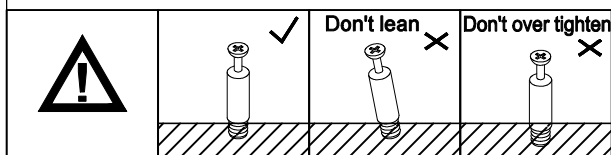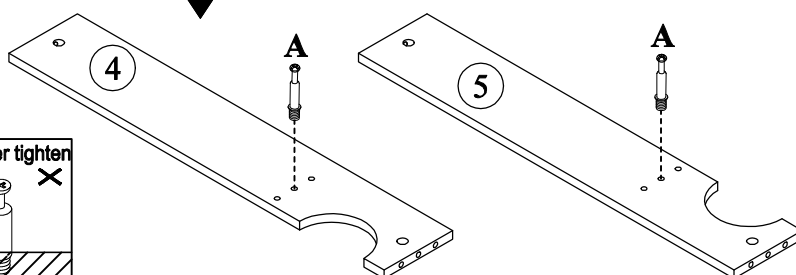



STEP: 2

B	N
	
2PC	4PCS

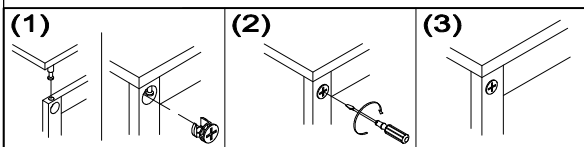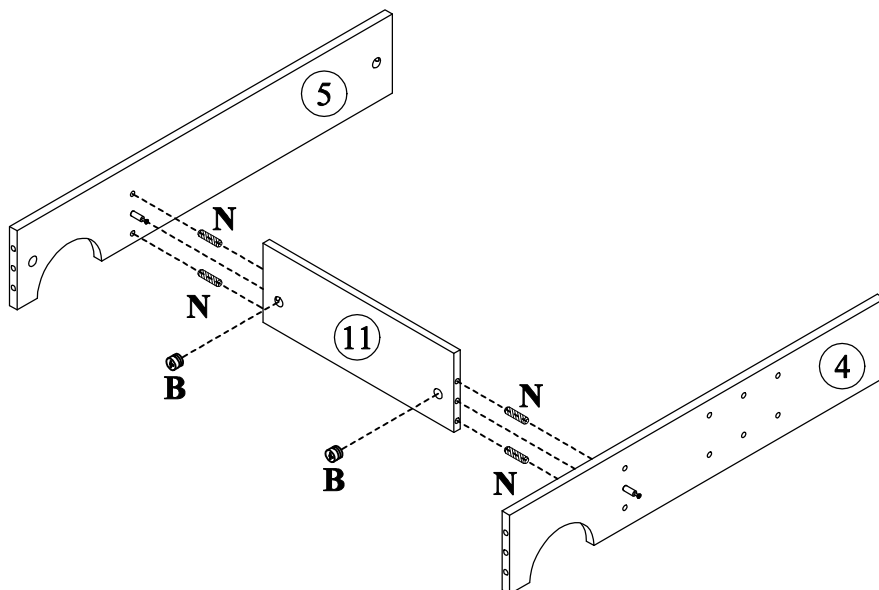


STEP: 3

B	N
	
2PC	4PCS

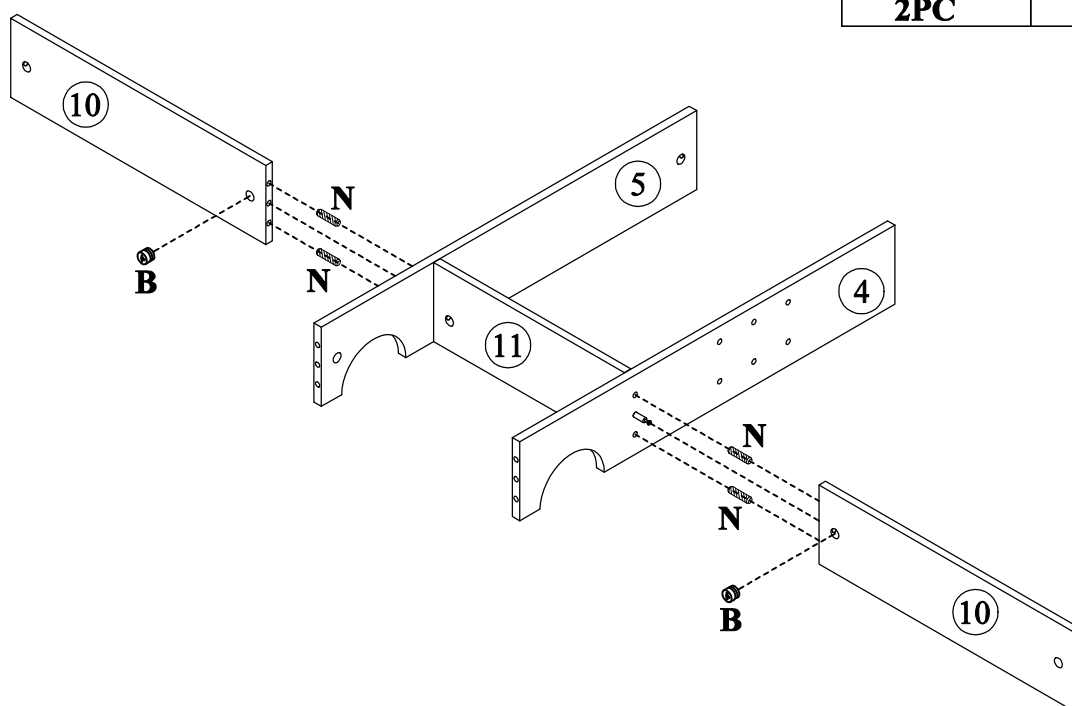


STEP: 4

B		N	
2PC		4PCS	

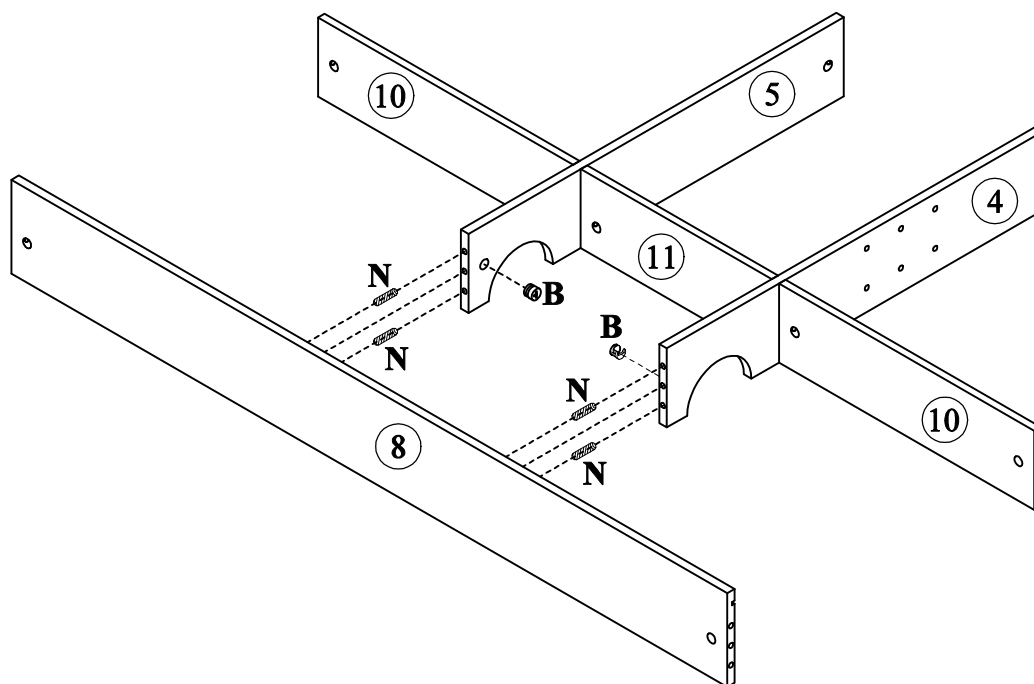


STEP: 5


B		N	
3PC		3PCS	

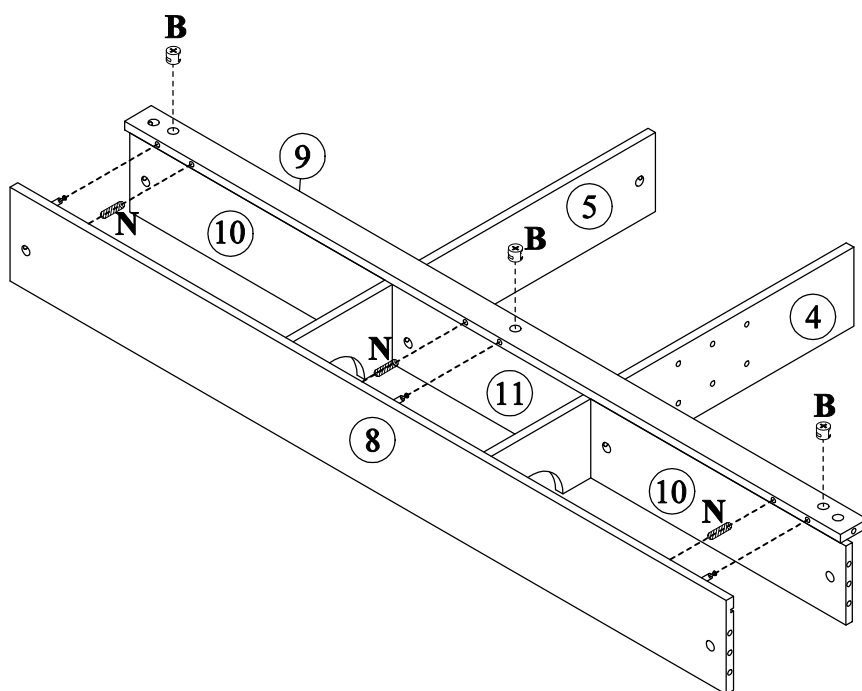


STEP: 6

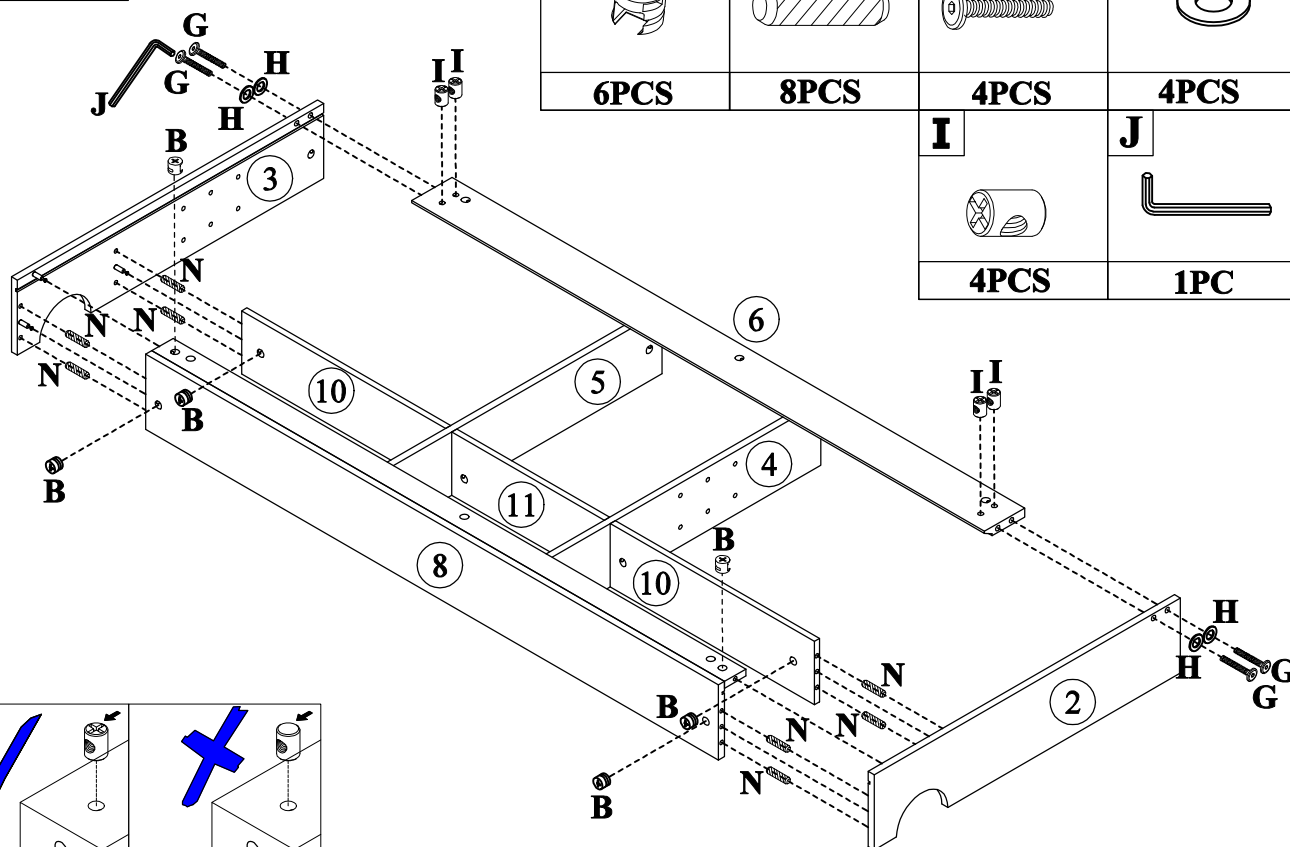

STEP: 7

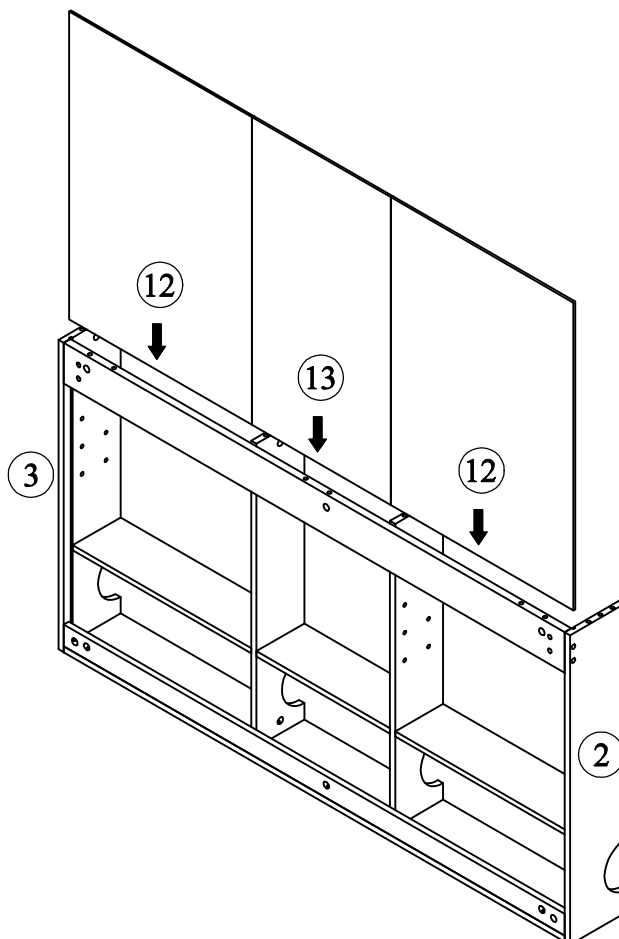


STEP: 8

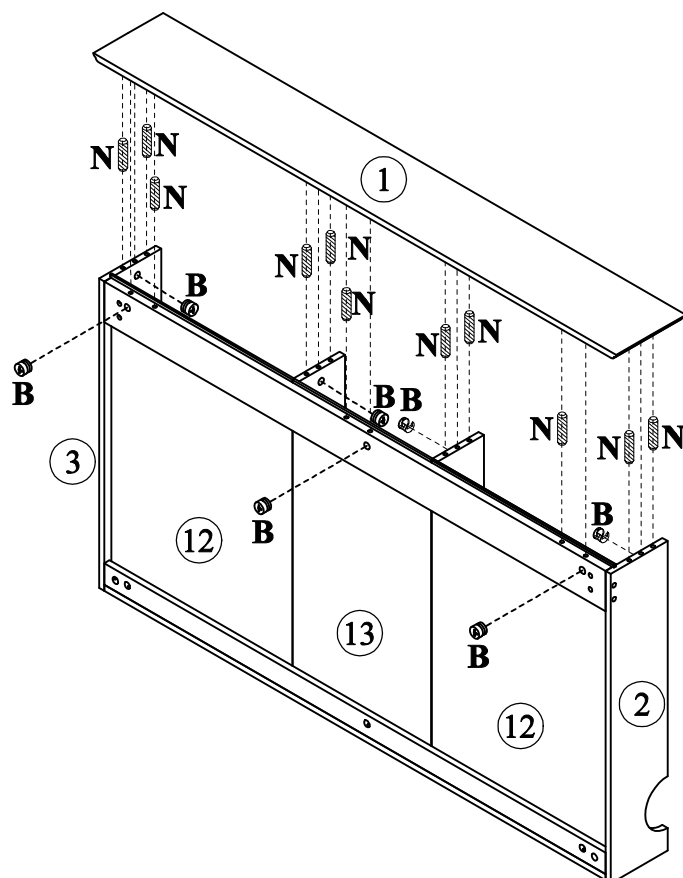


B		N	
7PC		11PCS	


STEP: 9

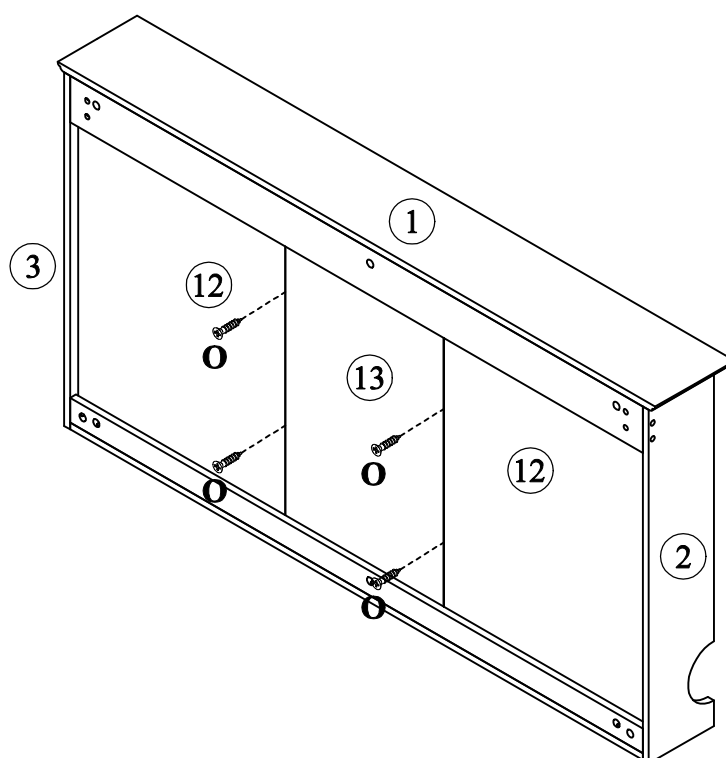


O	
4PCS	



STEP: 10

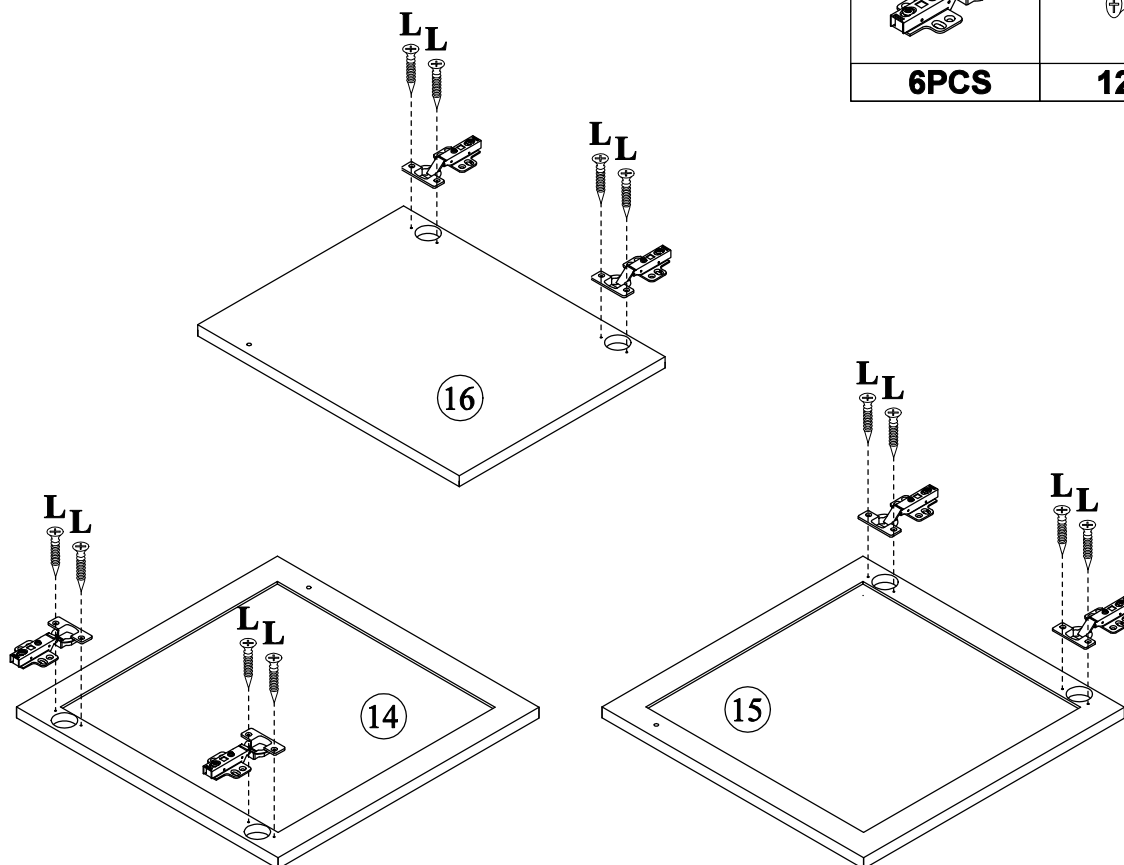


K	L
	
6PCS	12PCS

STEP: 11

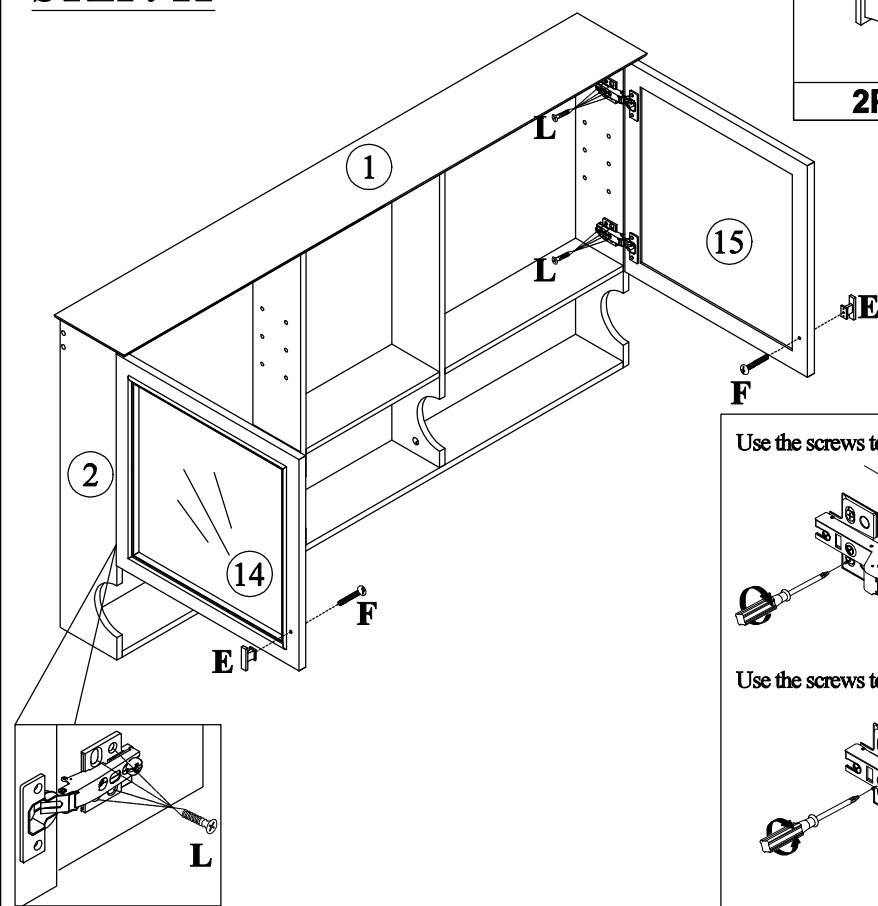

E	F	L
		
2PCS	2PCS	16PCS

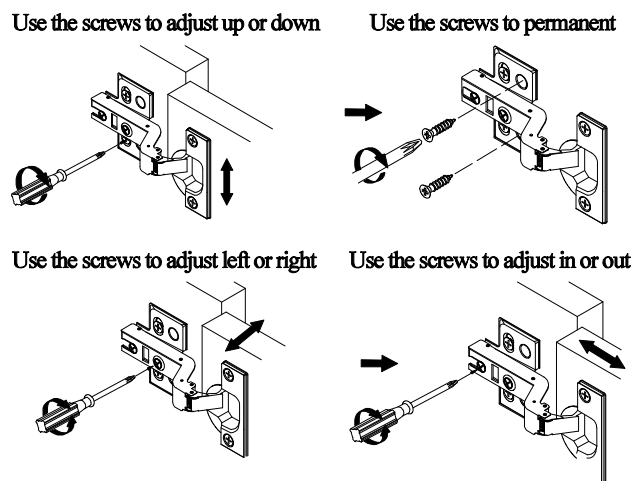


STEP: 12

M




8PCS

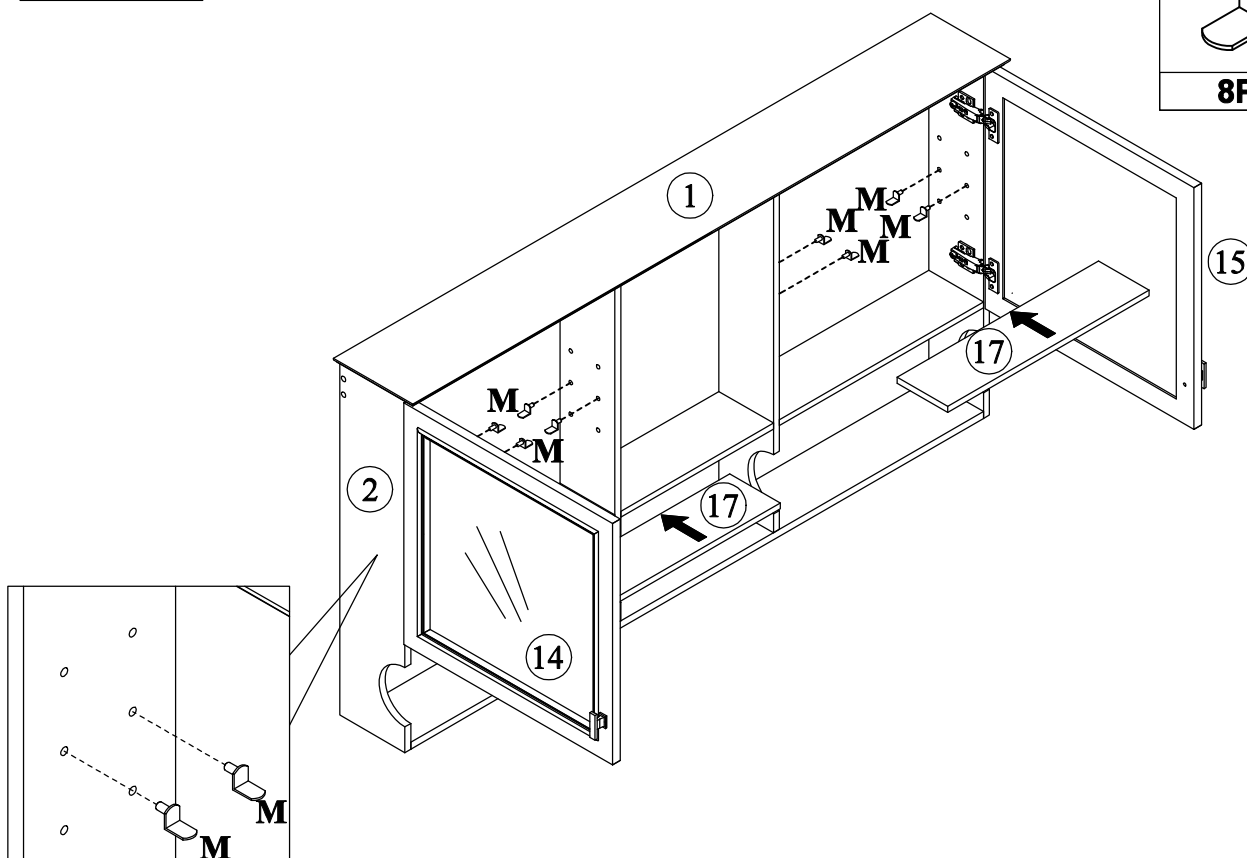


STEP: 13

E



1PC

F




1PC


L




8PCS

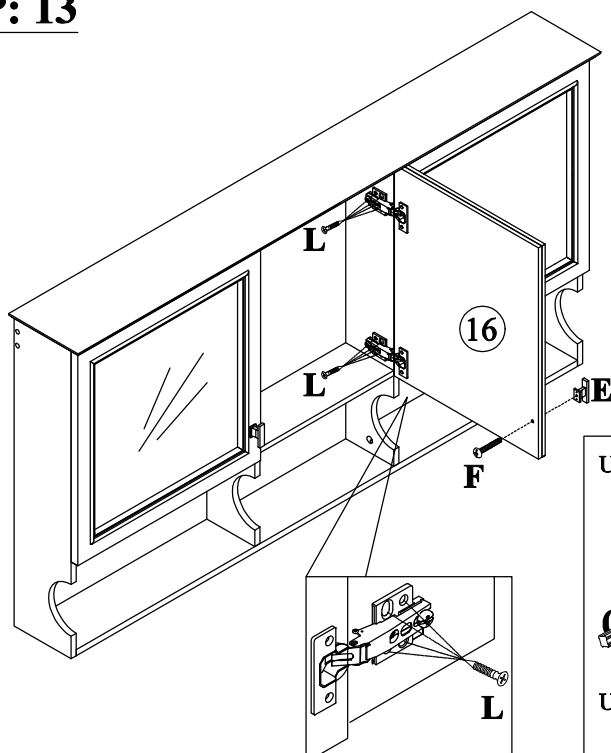


Use the screws to adjust up or down

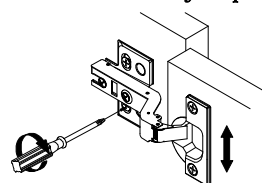


Use the screws to permanent

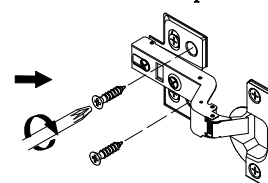


Use the screws to adjust left or right

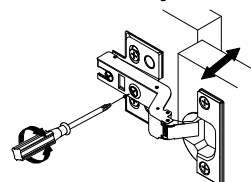

Use the screws to adjust in or out

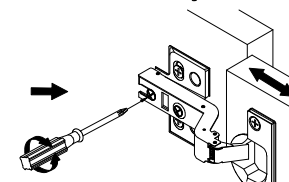


STEP: 14

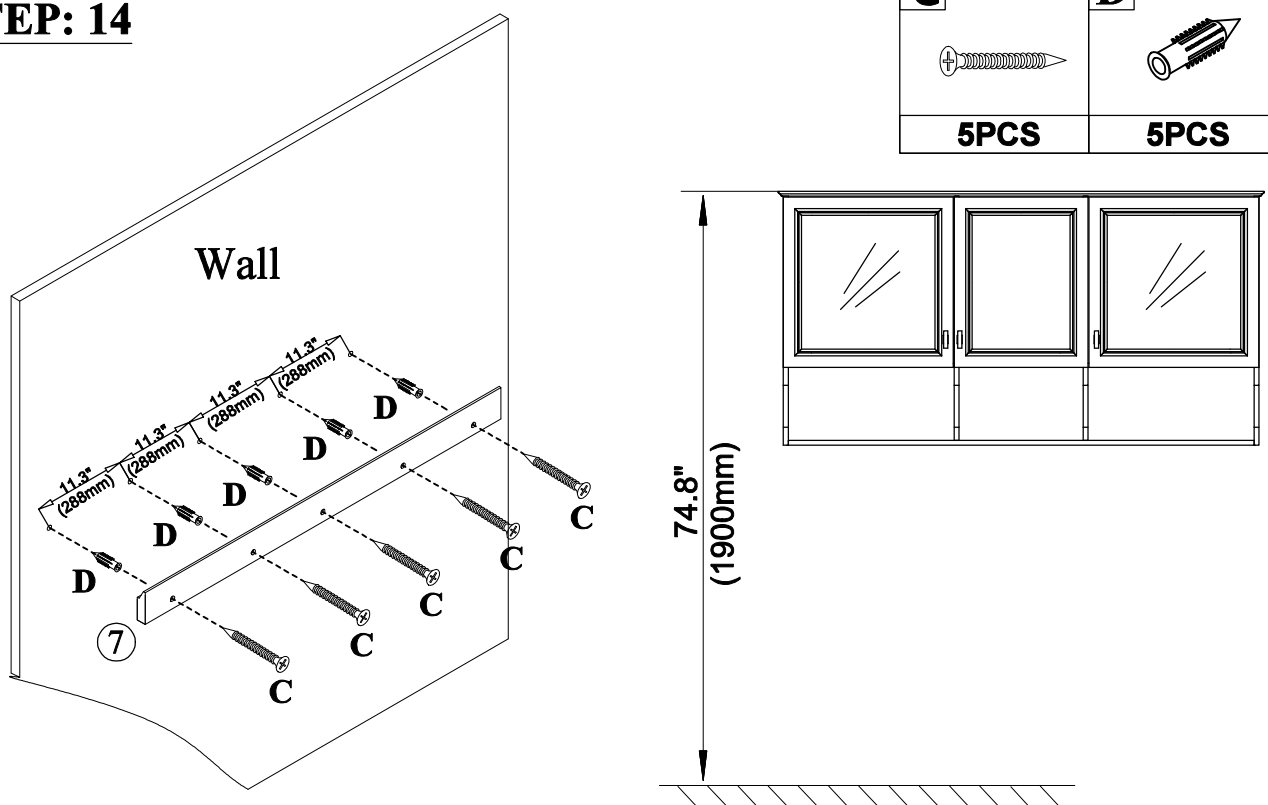


Draw the spacing between the walls and the No.7, punch holes in the wall, and fix the No.7 to the wall with screws.

Note: Appropriate distance from the top of cabinet to the ground is 74.8".


STEP: 15

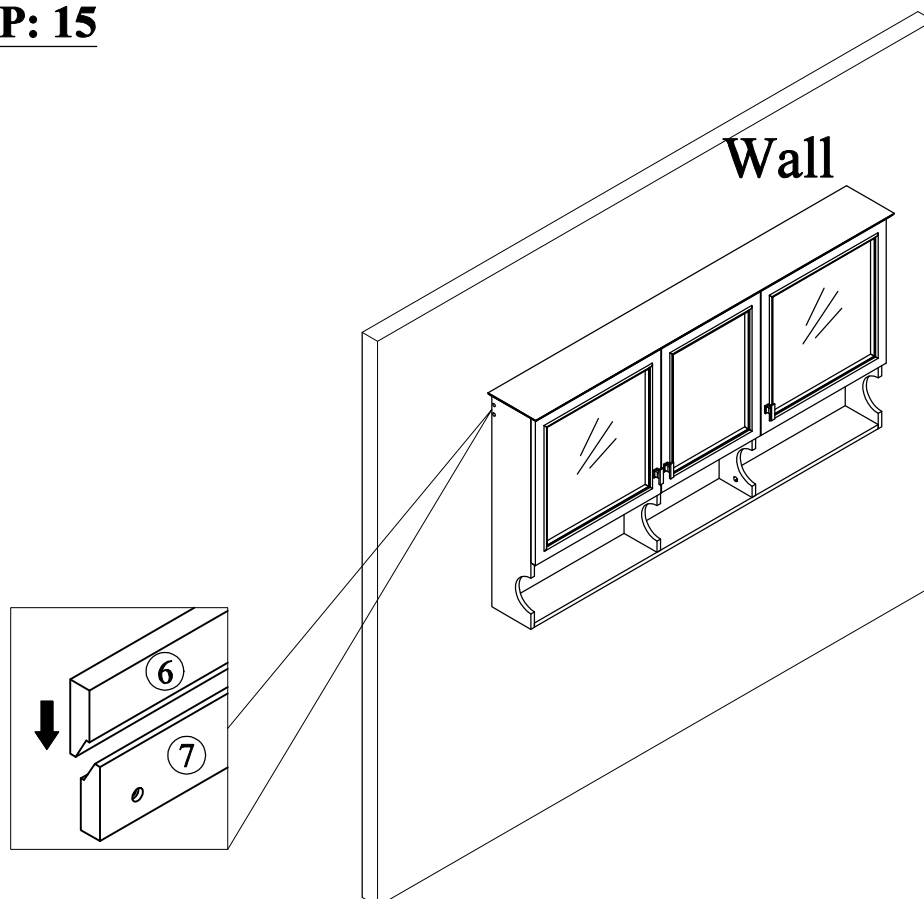

STEP: 16

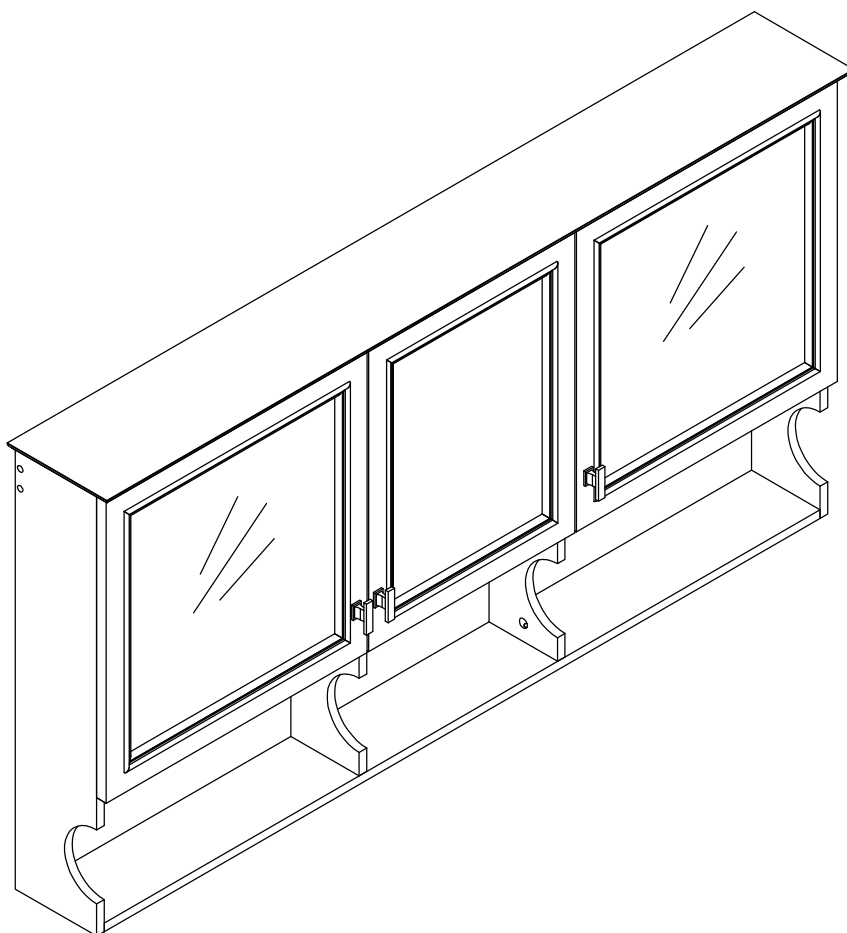

HINGE ADJUSTMENTS

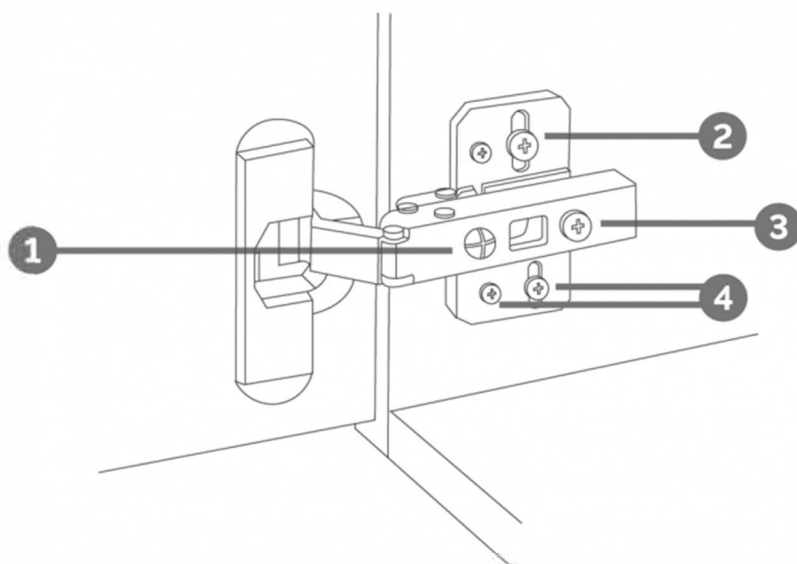


① Sideways / Tilt adjustment

Turn the screw

clockwise to move the door further away from the side of the cabinet

anticlockwise to move the door closer to the side of the cabinet

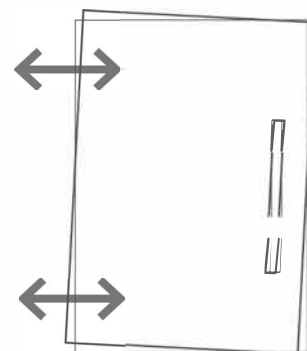


② ④ Height adjustment

While supporting the weight of the door, turn the screws

clockwise to move the door up

anticlockwise to move the door down

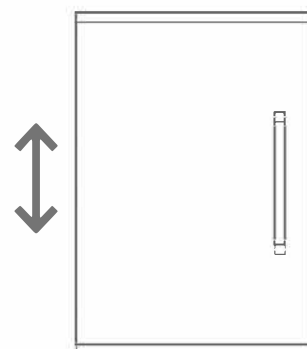

③ Forward and back adjustment

If the gap between the back of the door and the cabinet is too small, and the door may not close fully. Turn the screw

clockwise to decrease the gap between the door and the cabinet

anticlockwise to increase the gap between the door and the cabinet

