


ASSEMBLY INSTRUCTIONS

55 INCH MIRROR CABINET

HERMITAGE BATH


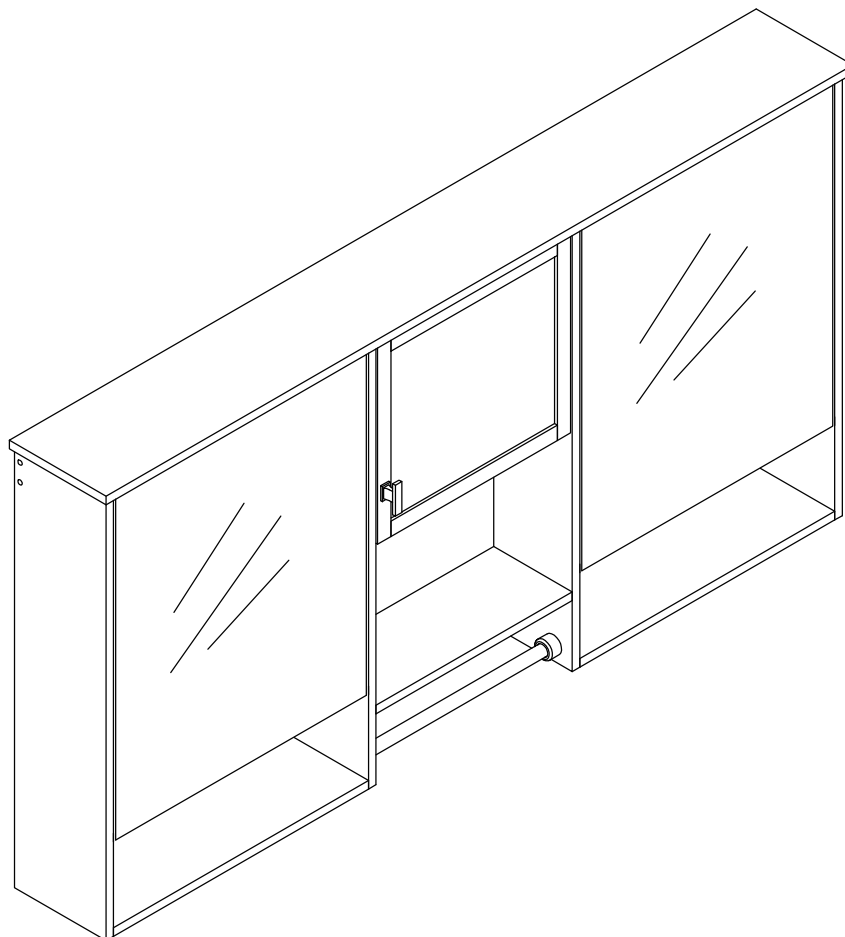


Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Separate, identify and count all parts and hardware.


Compare with the parts list to be sure all parts are present.

"DO NOT TIGHTEN SCREWS UNTIL COMPLETELY ASSEMBLED"


*** Use of power tool to assemble this product will invalidate any claim and damage this product making unsafe !!!**
*** Please assemble on a clean soft surface to avoid damage.**

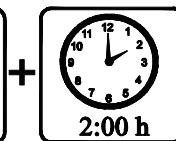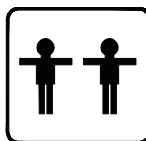

Tools Required



(Not included)



(Not included)

IMPORTANT:

PLEASE READ INSTRUCTION BEFORE STARTING THE ASSEMBLY

Before Installation


Important - Please read these instructions fully before starting assembly

Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts, which may have come loose inside the carton during shipment. Identify and count all items according to the PARTS LIST and/or HARDWARE LIST shown below. Check you have all the components and tools listed on the following pages.


- We recommend that you assemble this product with the assistance of another person; this will make the assembly easier, and will help eliminate damage to the product or injury to persons during assembly.
- Please do not over tighten screws or bolts until the assembly is completed.
- Keep children and animal away from the work area, small parts could choke if swallowed.
- Please put all parts on a non-abrasive floor before assembly, and follow the assembly steps to assemble your newly purchased product correctly and efficiently.

If you find that you have any trouble with assembly or missing or damaged parts please contact the seller.

Cam Lock Assembly Instructions














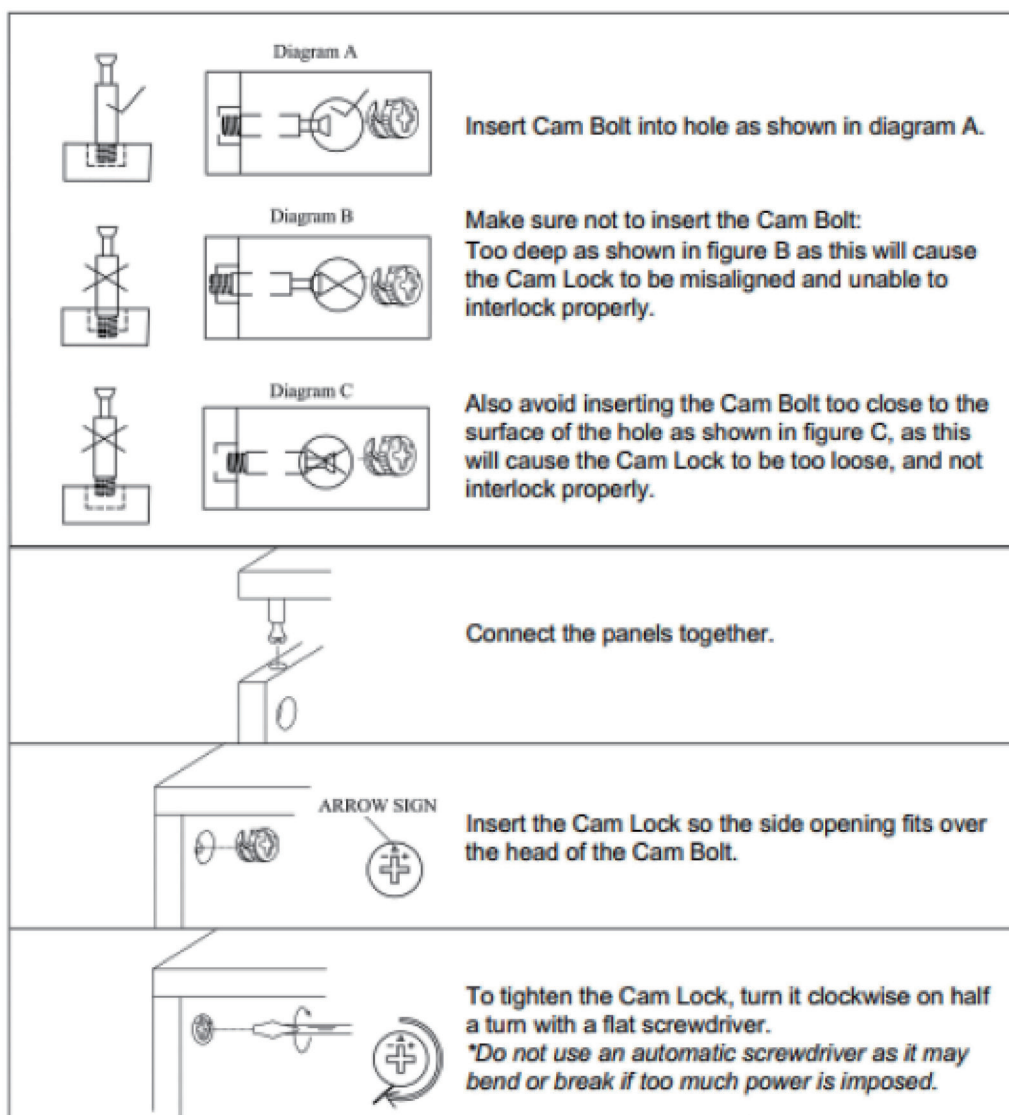


Detail View - CABINET



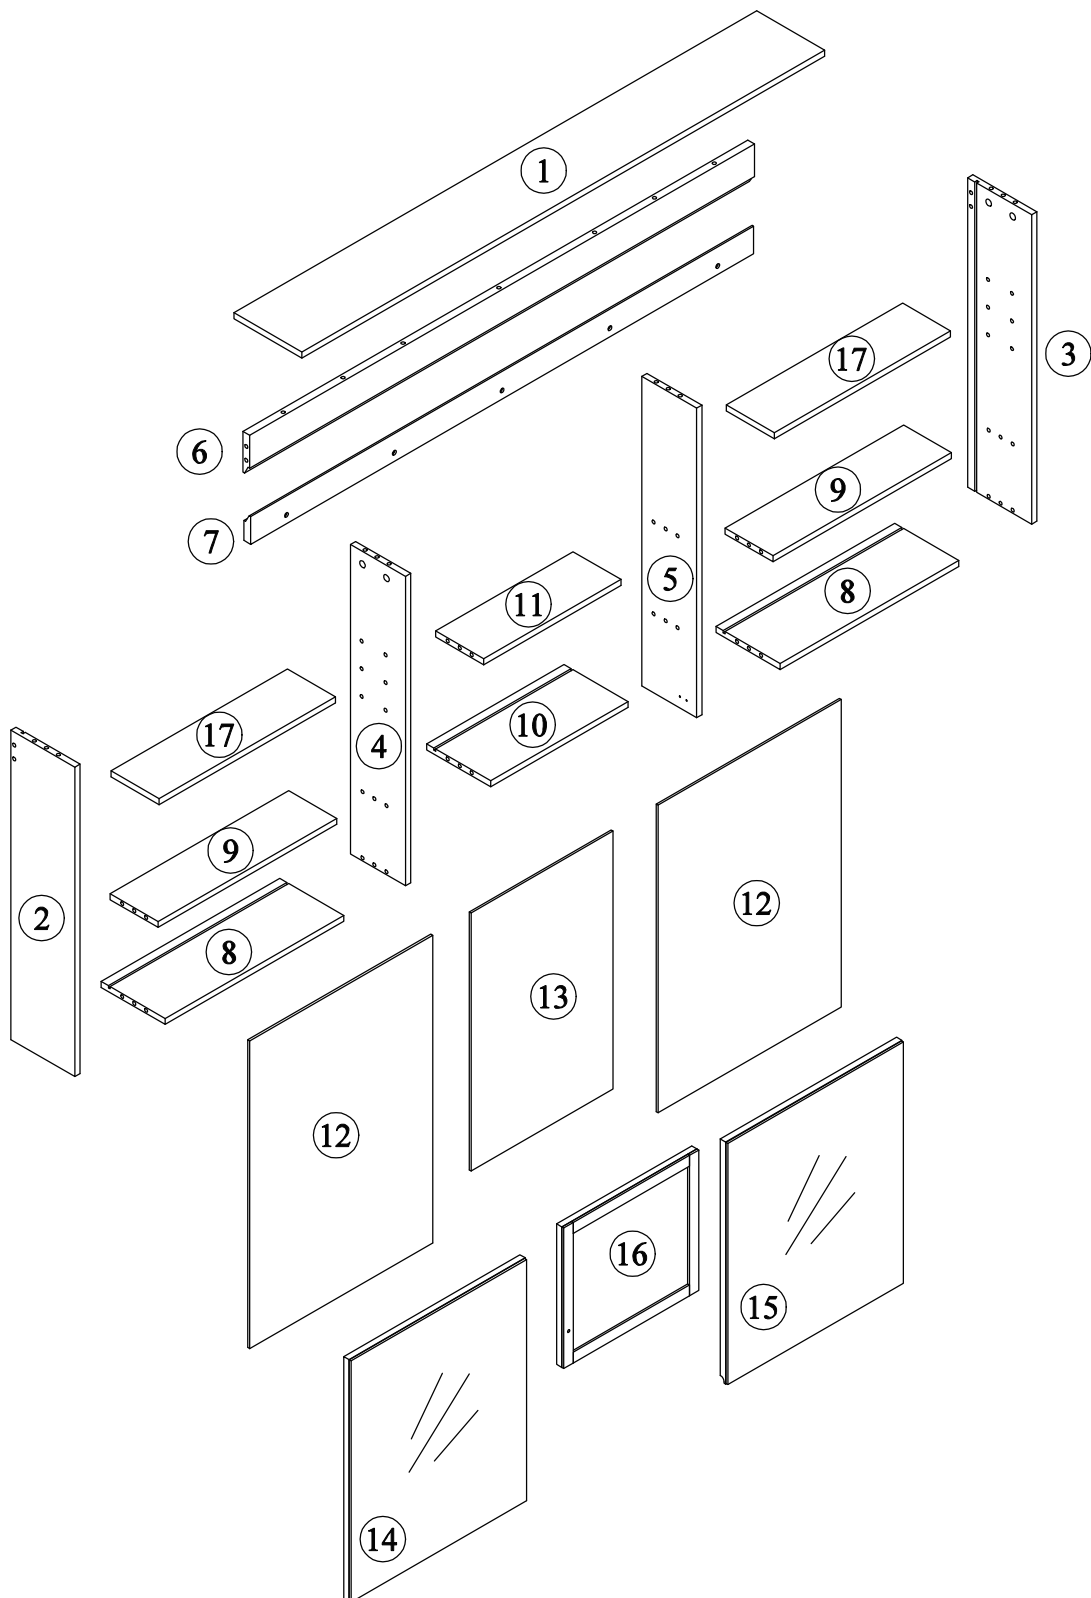


Identifying the Hardware-Identify the hardware using the illustrations below.









Part List - N710P401336

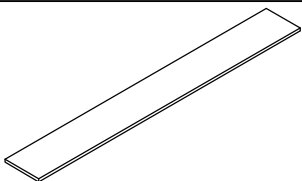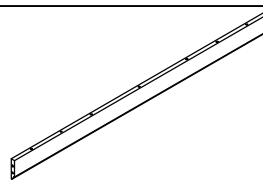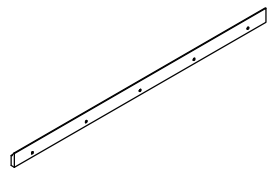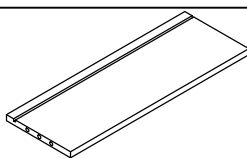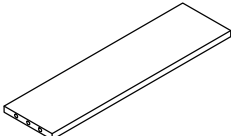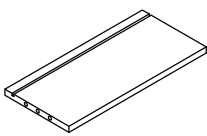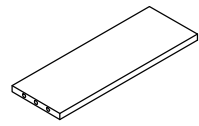1	 Top Panel - 1pc	2	 Side Panel Left - 1pc
3	 Side Panel Right - 1pc	4	 Mid Panel (L) - 1pc
5	 Mid Panel (R) - 1pc	6	 Rear Top Bar - 1pc
7	 Connect Bar - 1pc	8	 Bottom Panel (L+R) - 2pcs
9	 Mid Panel (L+R) - 2pcs	10	 Mid Panel Bottom - 1pc
11	 Mid Panel - 1pc	12	 Back Panel (L+R) - 2pcs
13	 Back Panel Mid - 1pc	14	 Door Cabinet Left - 1pc


Part List - N710P401336

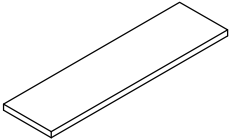15  Door Cabinet Right - 1pc	16  Door Cabinet Mid - 1pc
17  Adjustable Shelf - 2pcs	



Hardware List - N710P401336

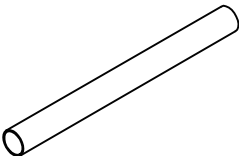
A	 ø6x35mm Three in one bolts (36pcs)	B	 ø14.5x12mm Three in one lock (36pcs)	C	 ø10xø5x60mm Flat head screw (5pcs)
D	 ø12x55mm Plastic stopper (5pcs)	E	 Handle (1pc)	F	 ø5/32"x20mm Handle screw (1pc)
G	 ø13x1/4"x50mm Hex-Head bolts (4pcs)	H	 ø1/4"x16x1mm Washer (4pcs)	I	 ø1/4x10x13mm Horizontal-Hole bolts(4pcs)
J	 4mm Allen key (1pc)	K	 Damping hinge (6pcs)	L	 ø7xø3.5x15mm Flat head screw (36pcs)
M	 Steel Pipe (1pc)	N	 Pipe Bracket (2pcs)	O	 ø6xø3x12mm Flat head screw (4pcs)
P	 Laminate pad(8pcs)	Q	 ø8x30mm Wood dowel (19pcs)	R	 ø7xø3.5x15mm Round head screw(4pcs)

Expand hardware (N) into two separate parts


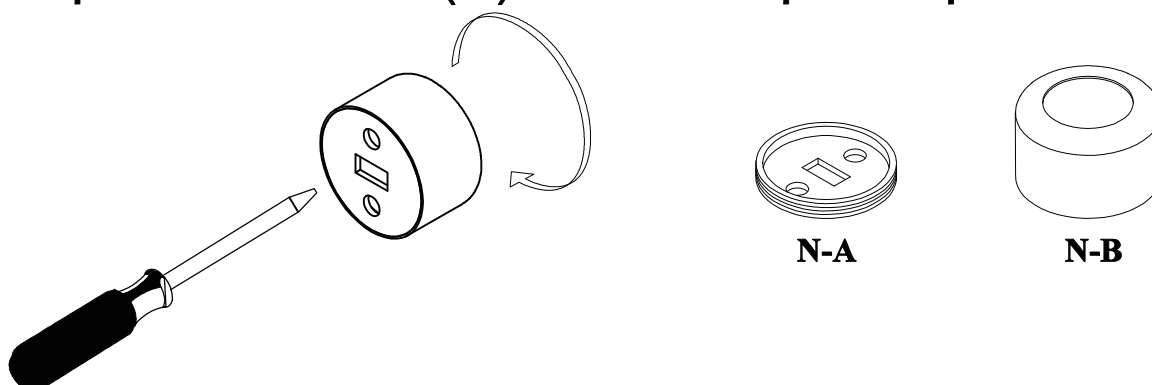


STEP: 1


A		N	
36PCS		2PCS	
		O	
		4PCS	


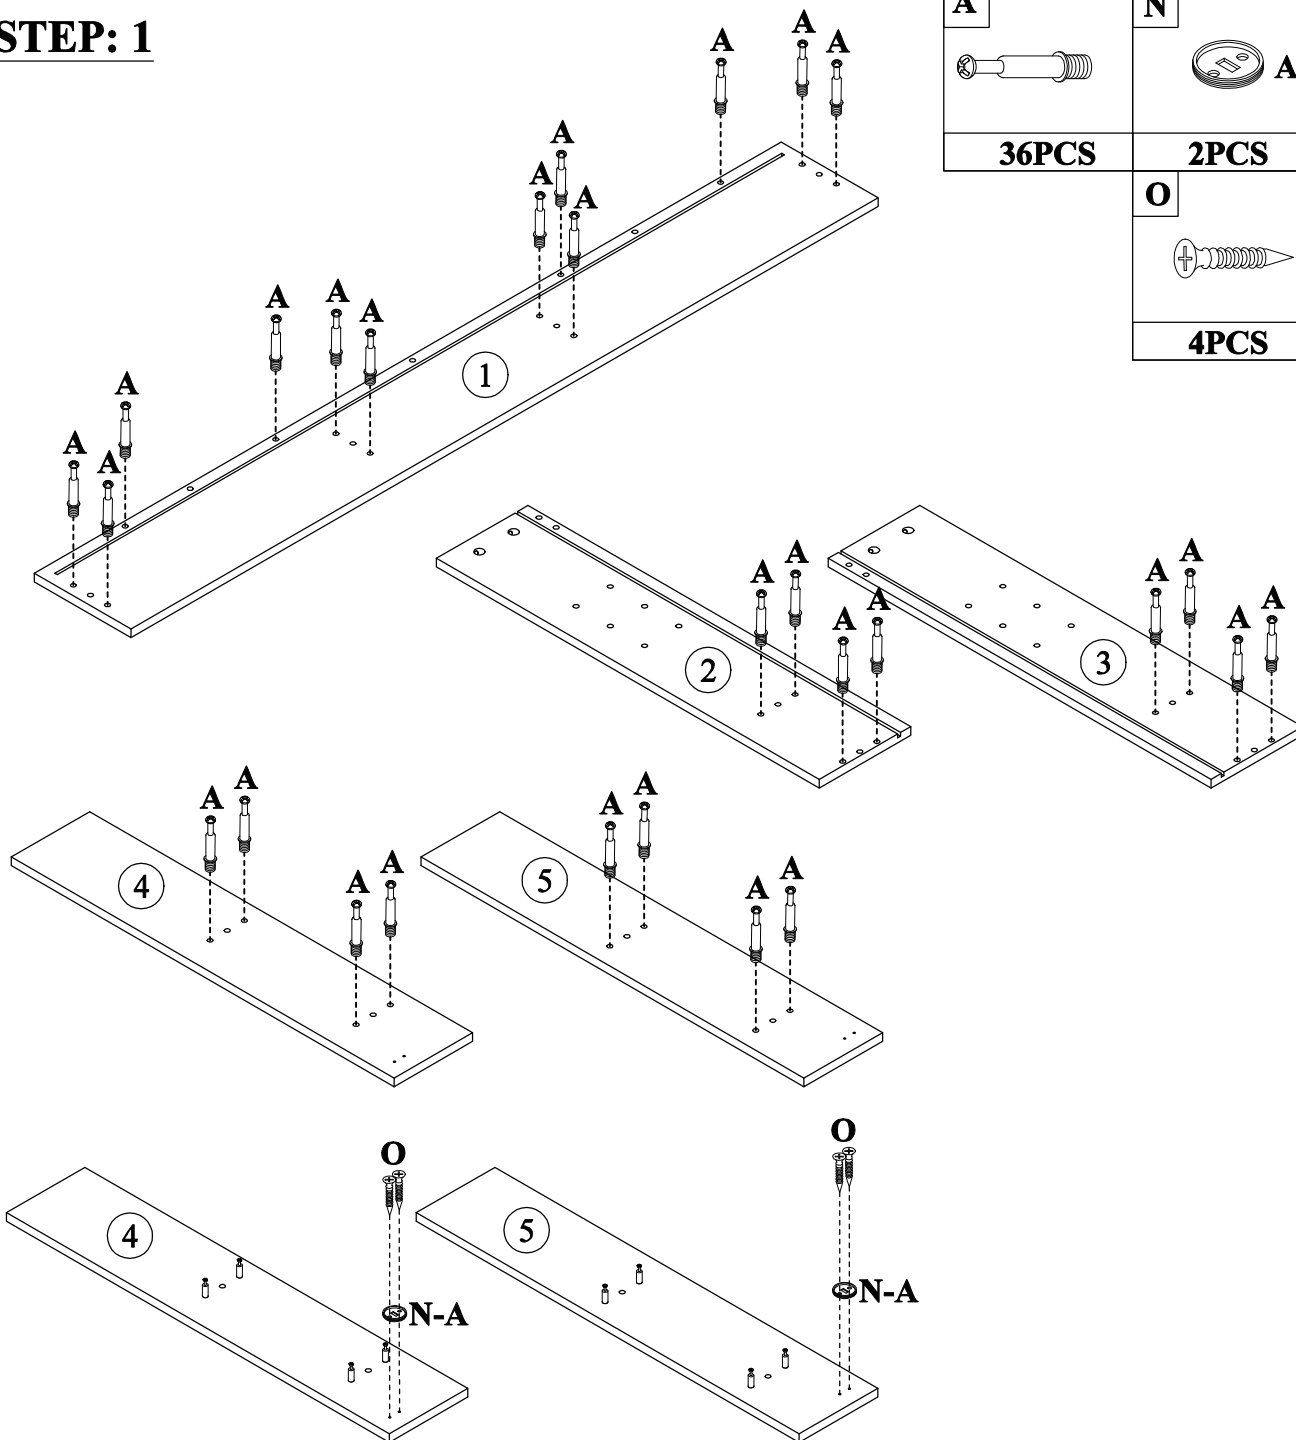


Turn over and install screws (A)

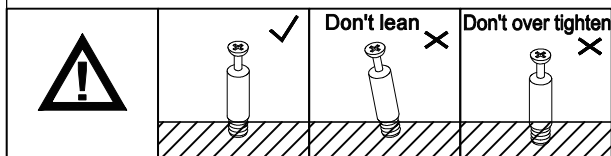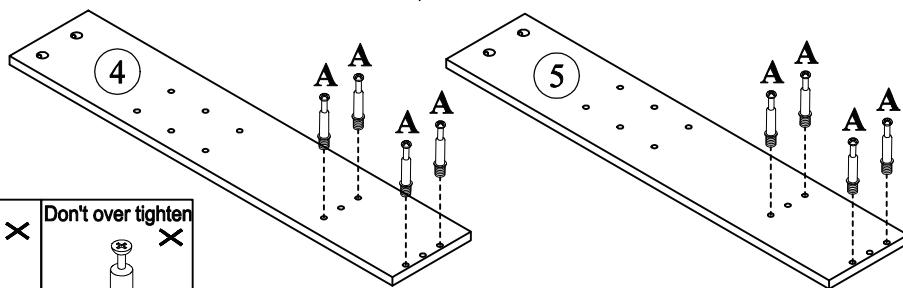



STEP: 2

B	Q
	
8PC	4PCS

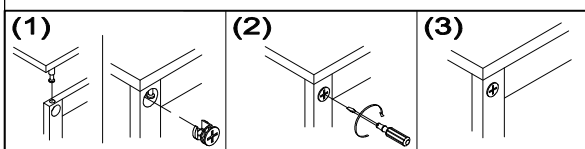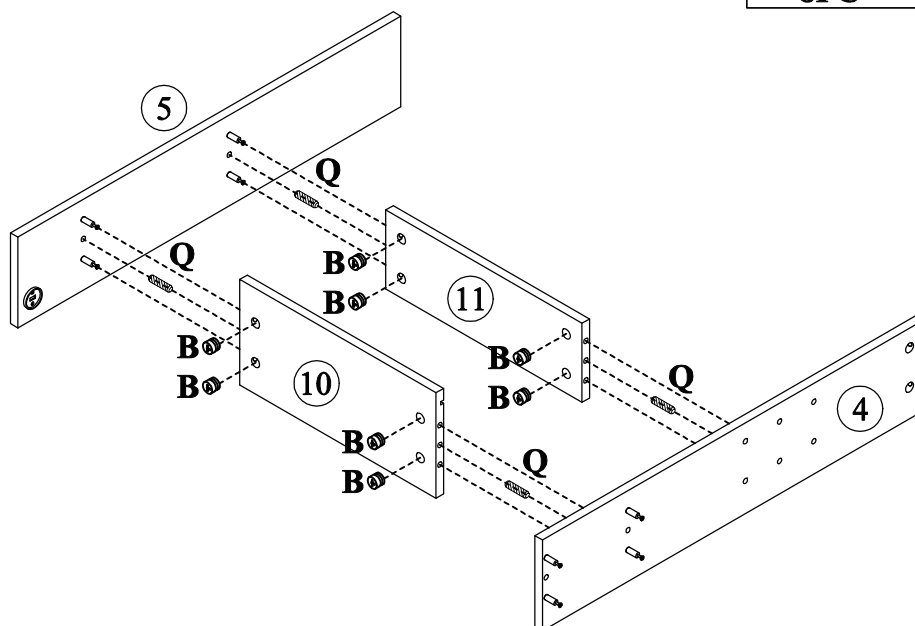


STEP: 3


B	Q
	
8PC	4PCS

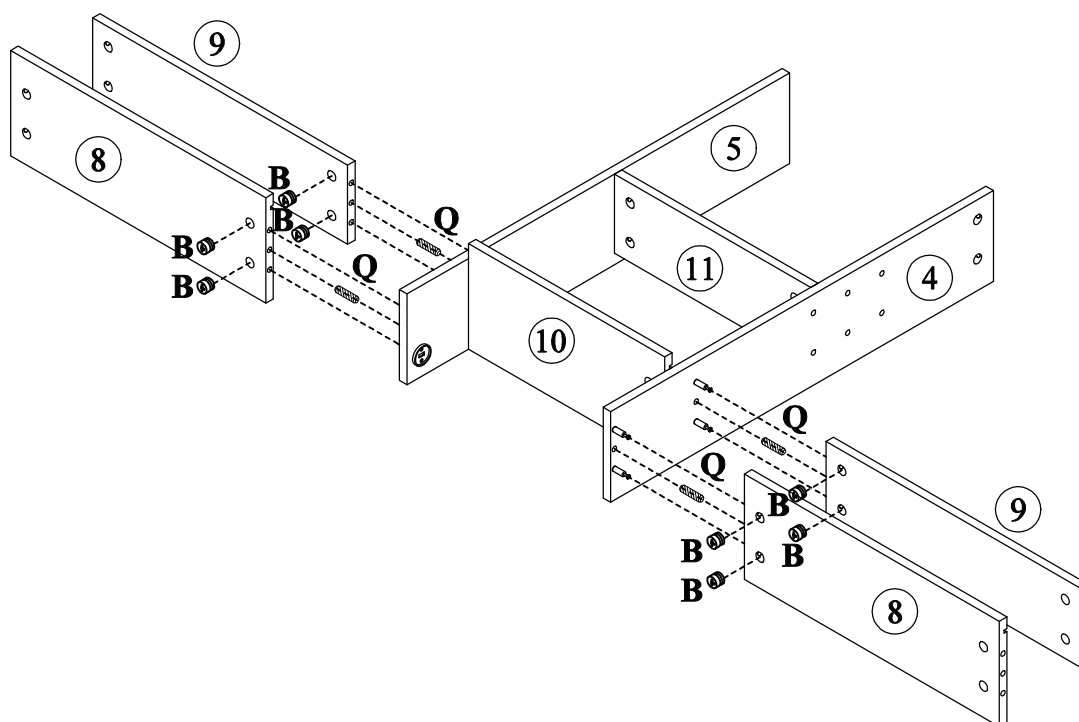


STEP: 4

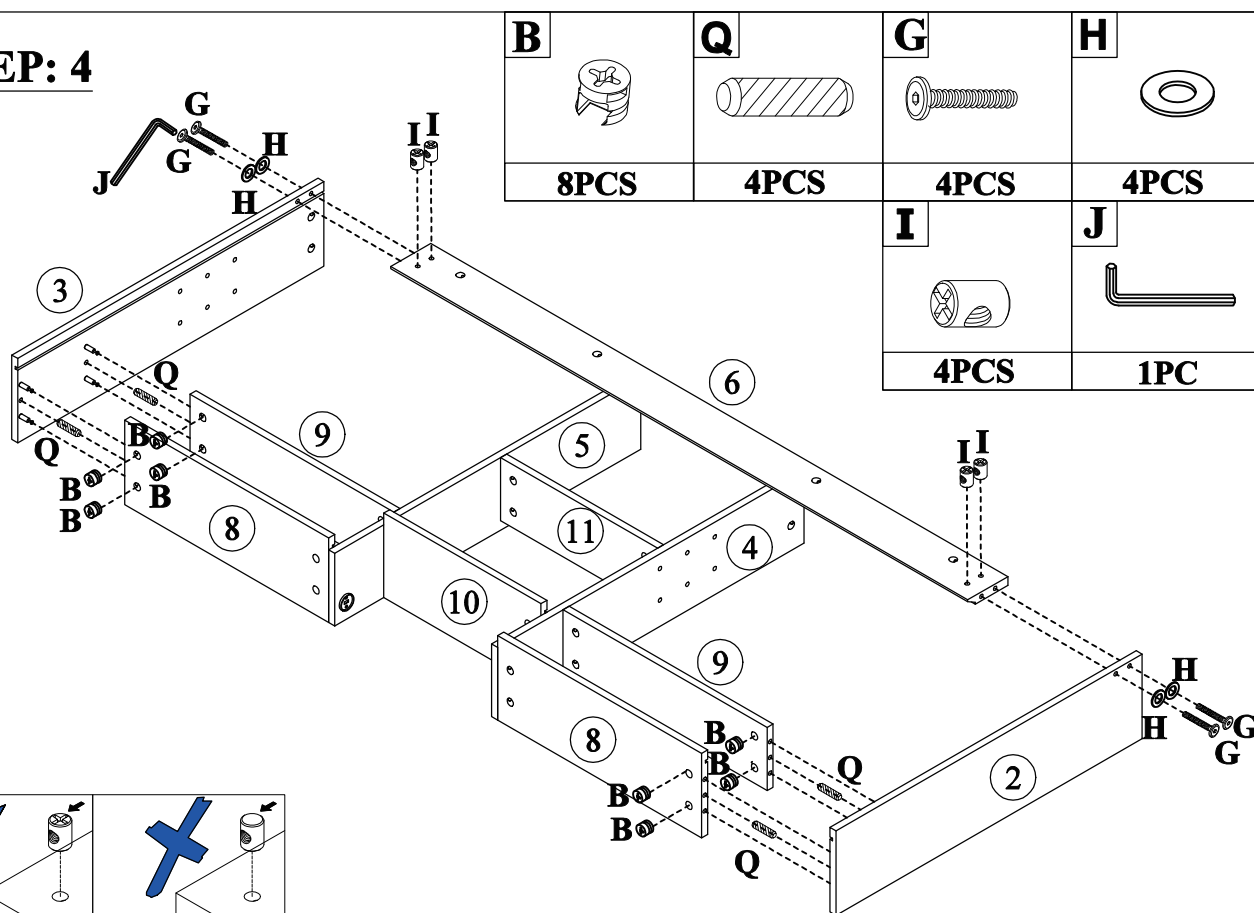


STEP: 5

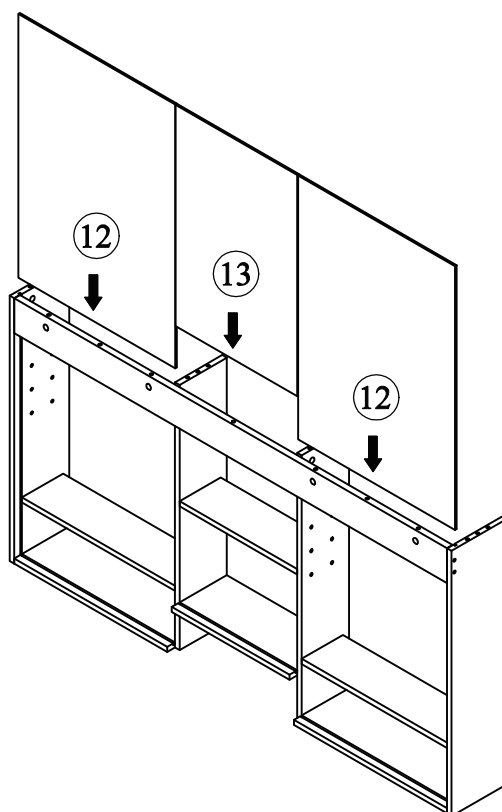


STEP: 6

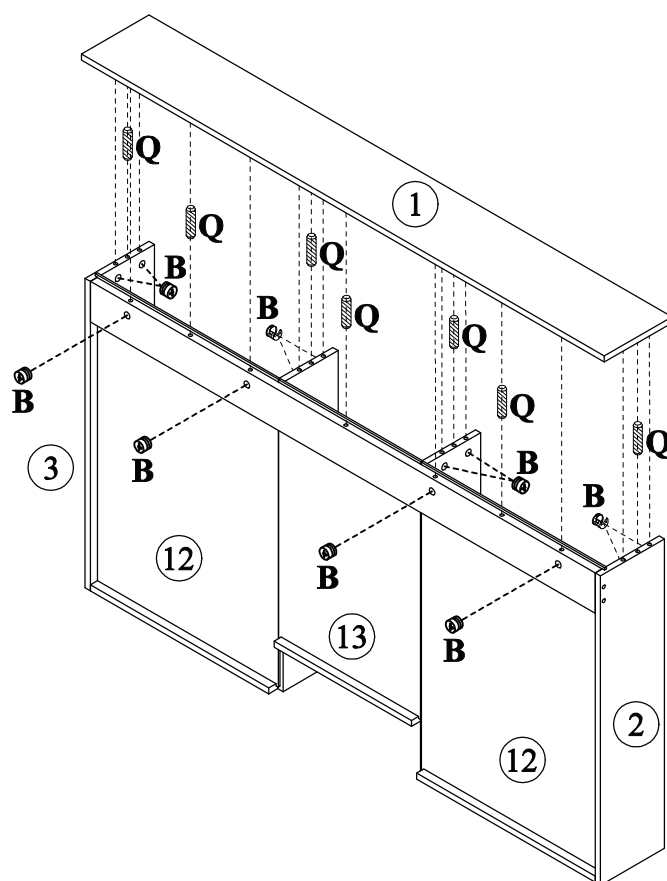


B		Q	
12PC		7PCS	

STEP: 7

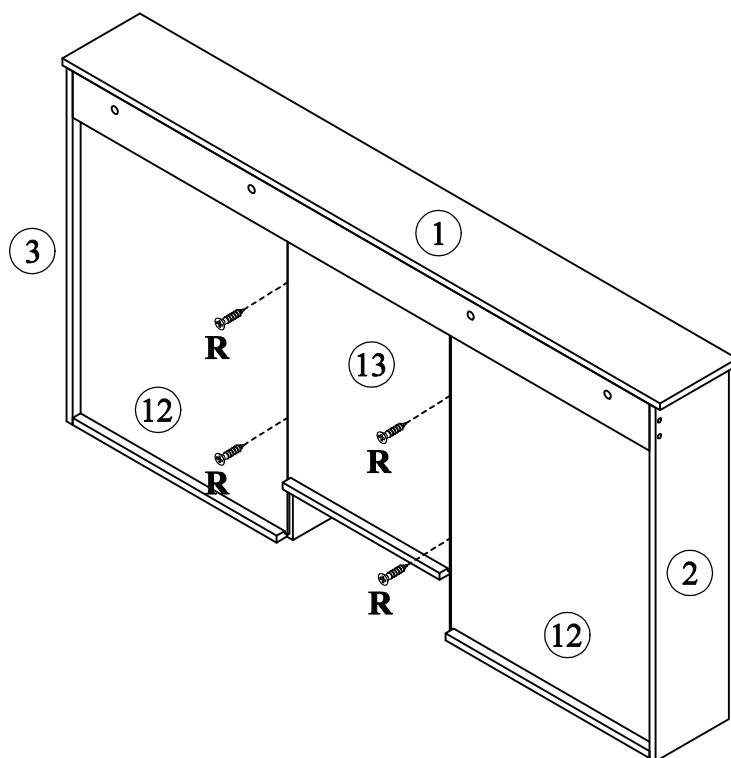


R	
4PCS	

STEP: 8

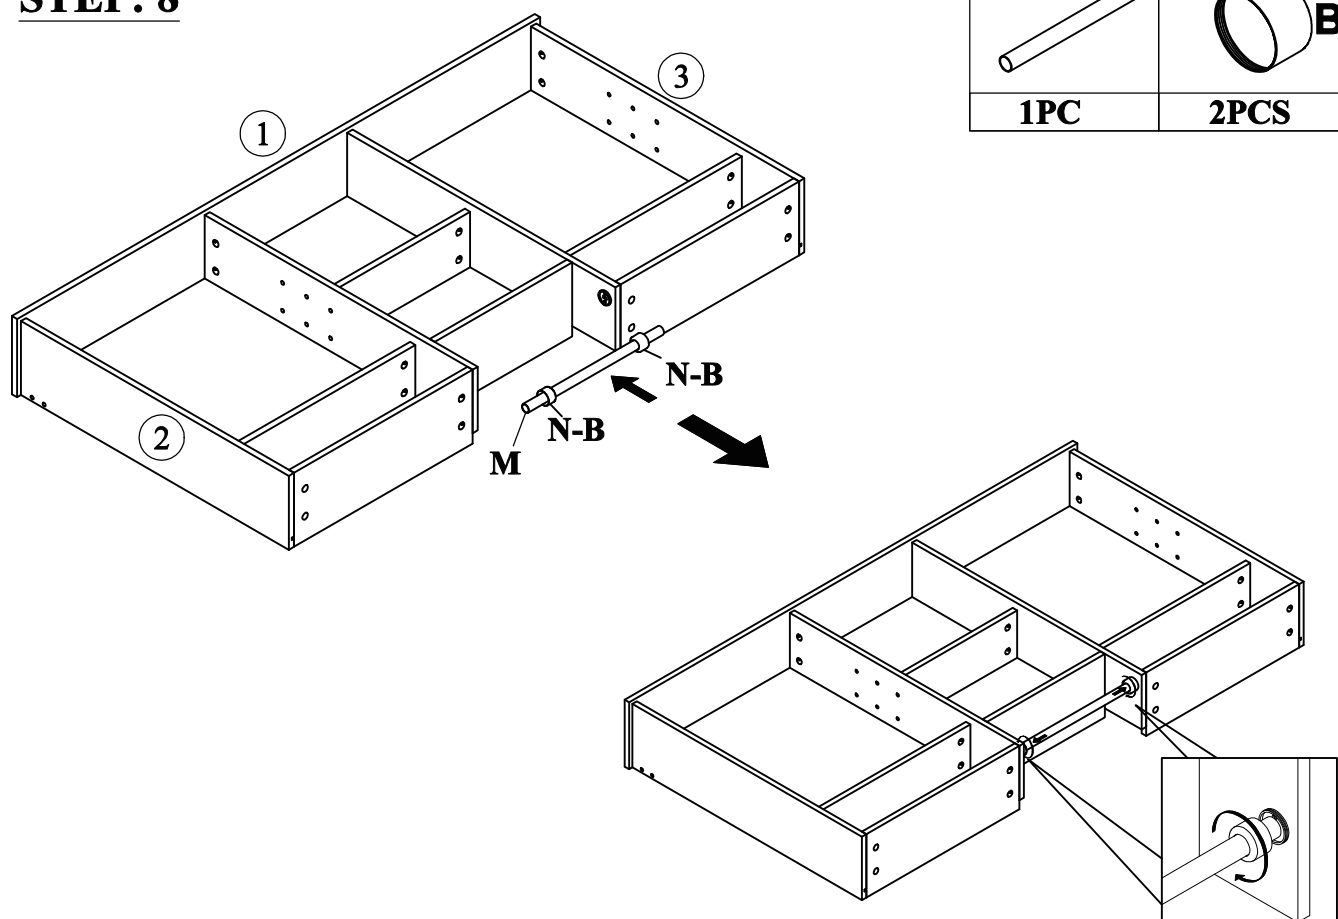

STEP: 9

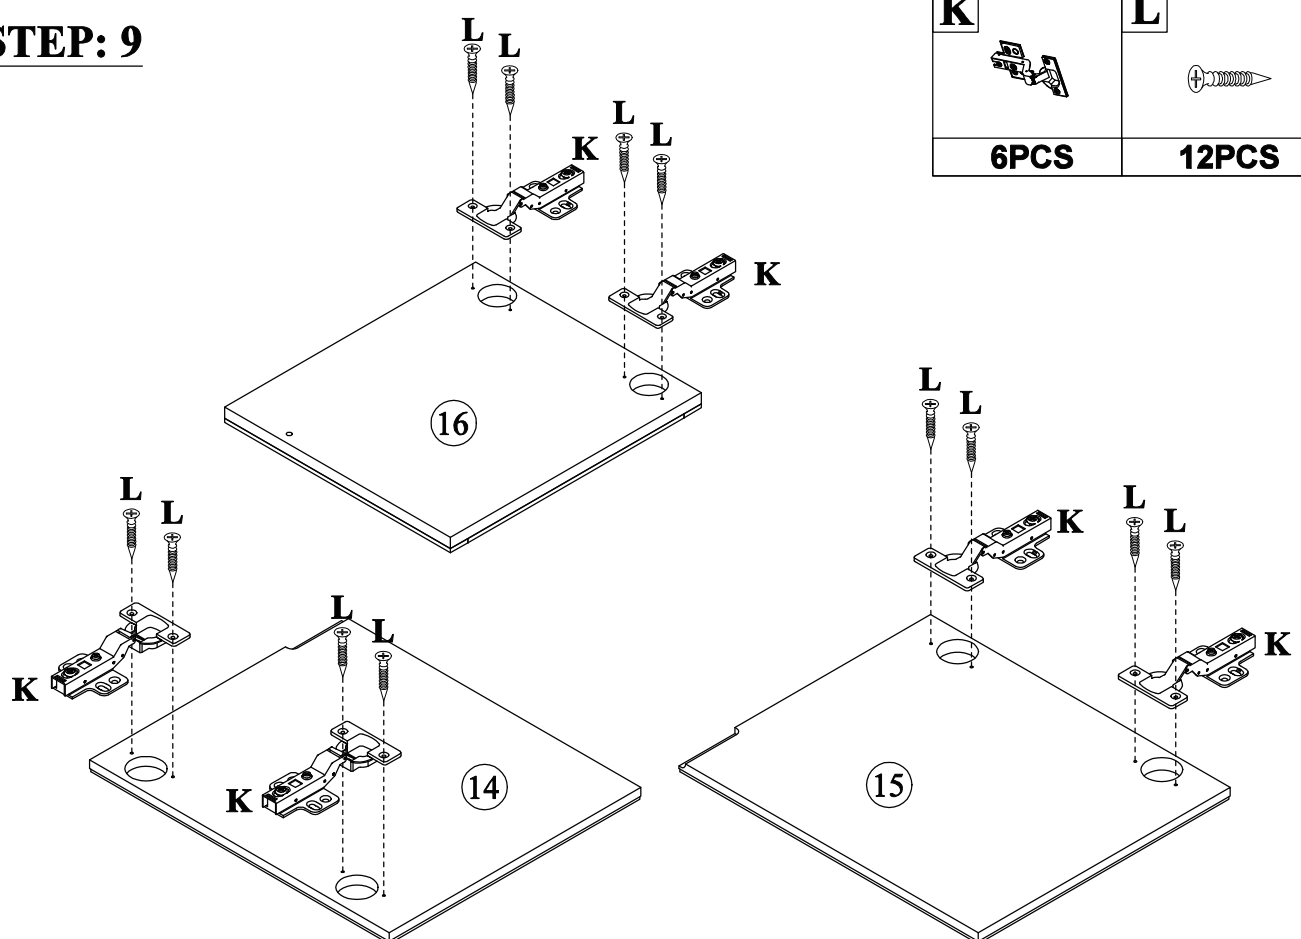


STEP: 10


L




16PCS

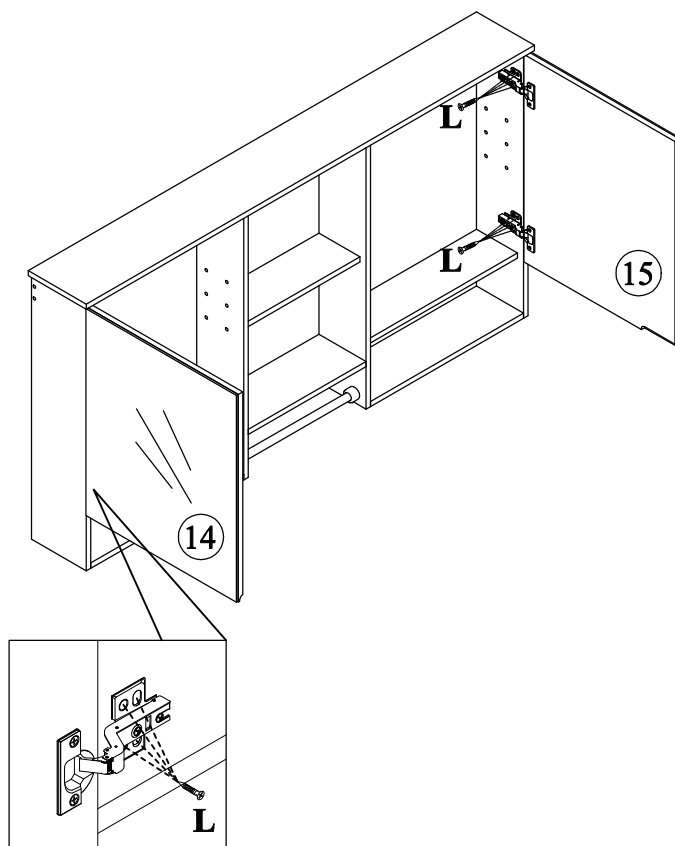


Use the screws to adjust up or down

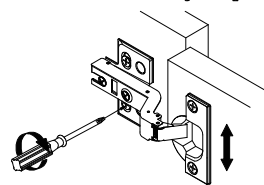


Use the screws to permanent

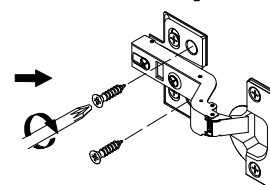

Use the screws to adjust left or right

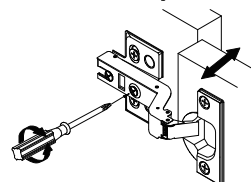

Use the screws to adjust in or out

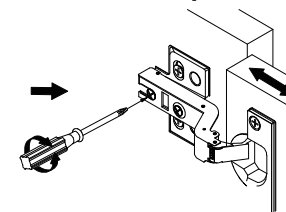


STEP: 11


P






8PCS

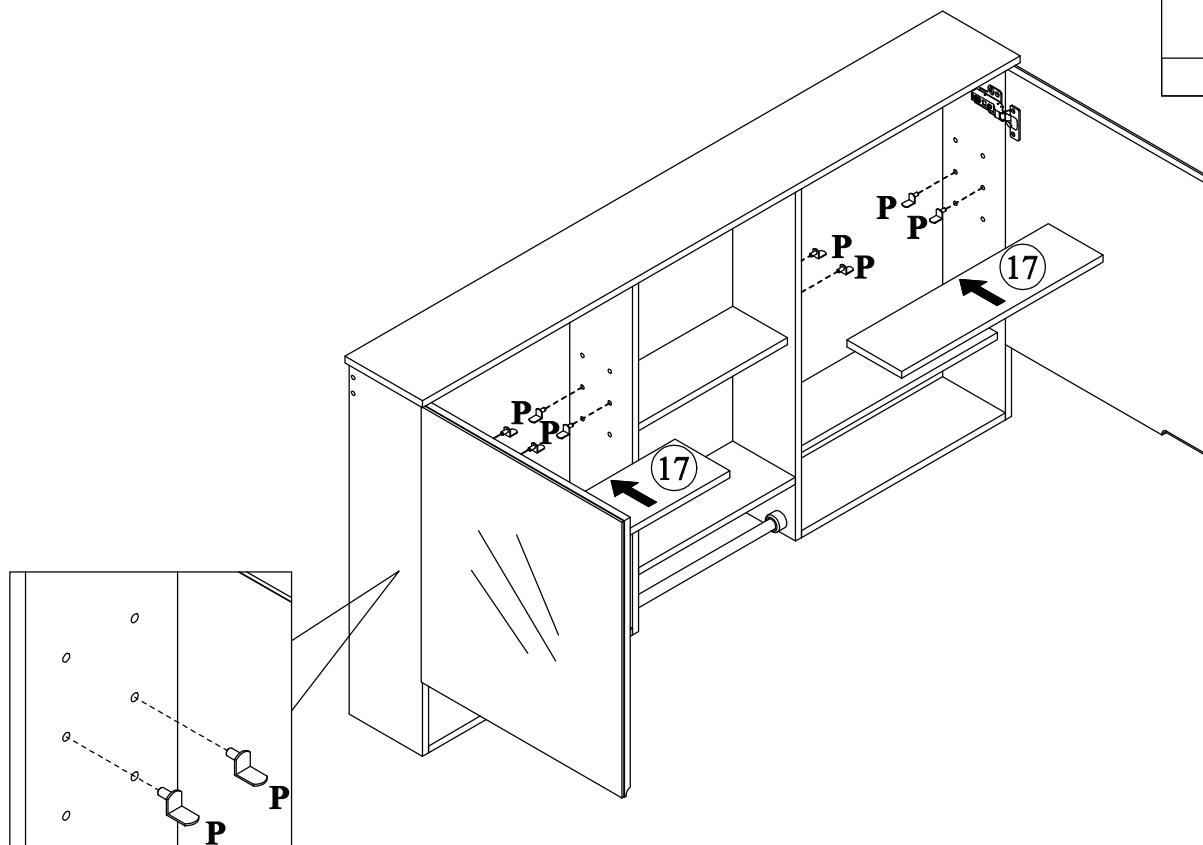


STEP: 12

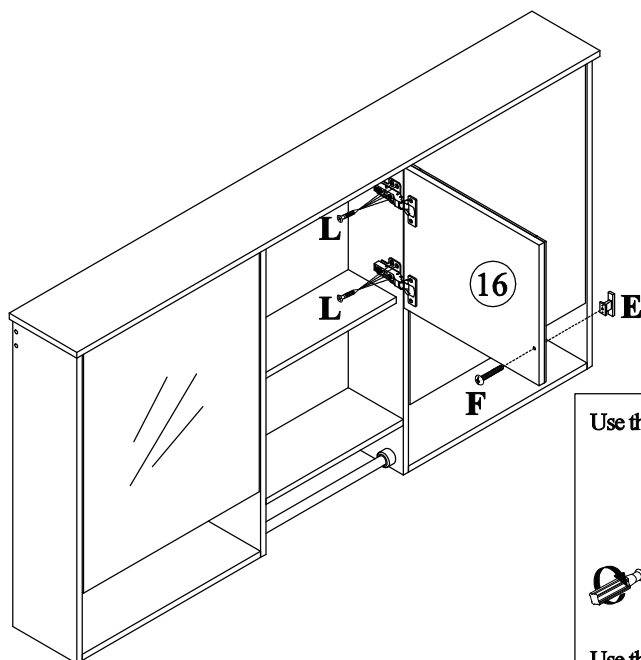



E		F		L	
1PC		1PC		8PCS	

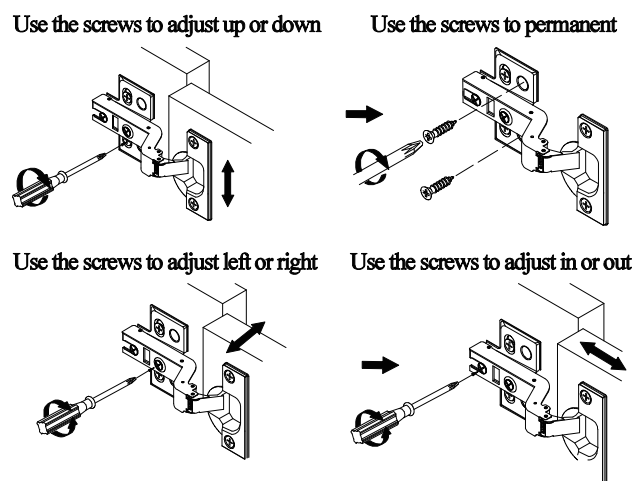

STEP: 13

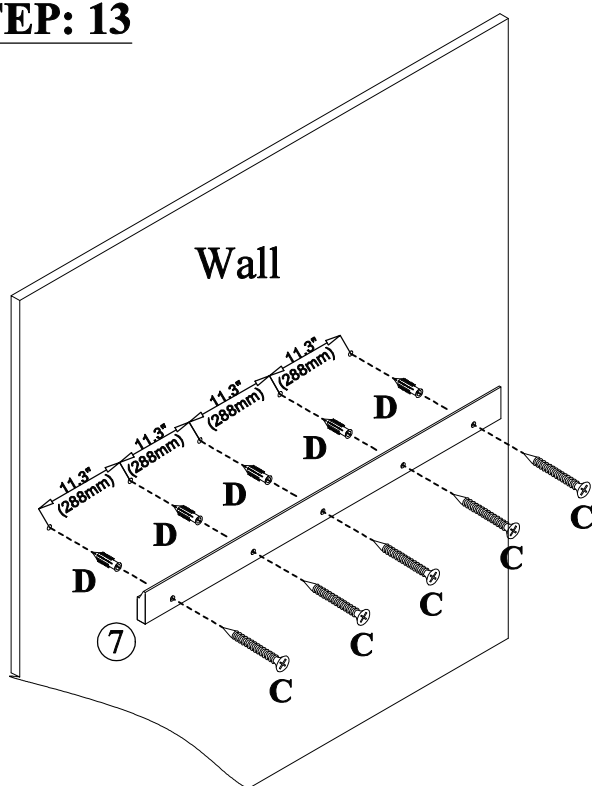


C		D	
5PCS		5PCS	

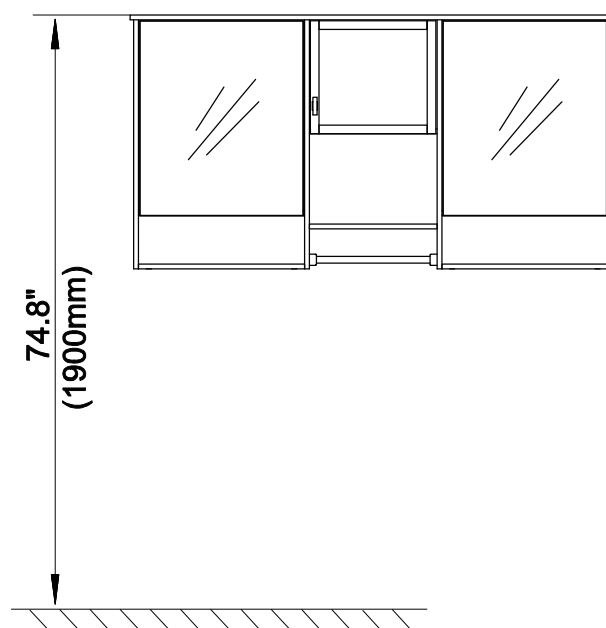


Draw the spacing between the walls and the No.7, punch holes in the wall, and fix the No.7 to the wall with screws.

Note: Appropriate distance from the top of cabinet to the ground is 74.8".


STEP: 14

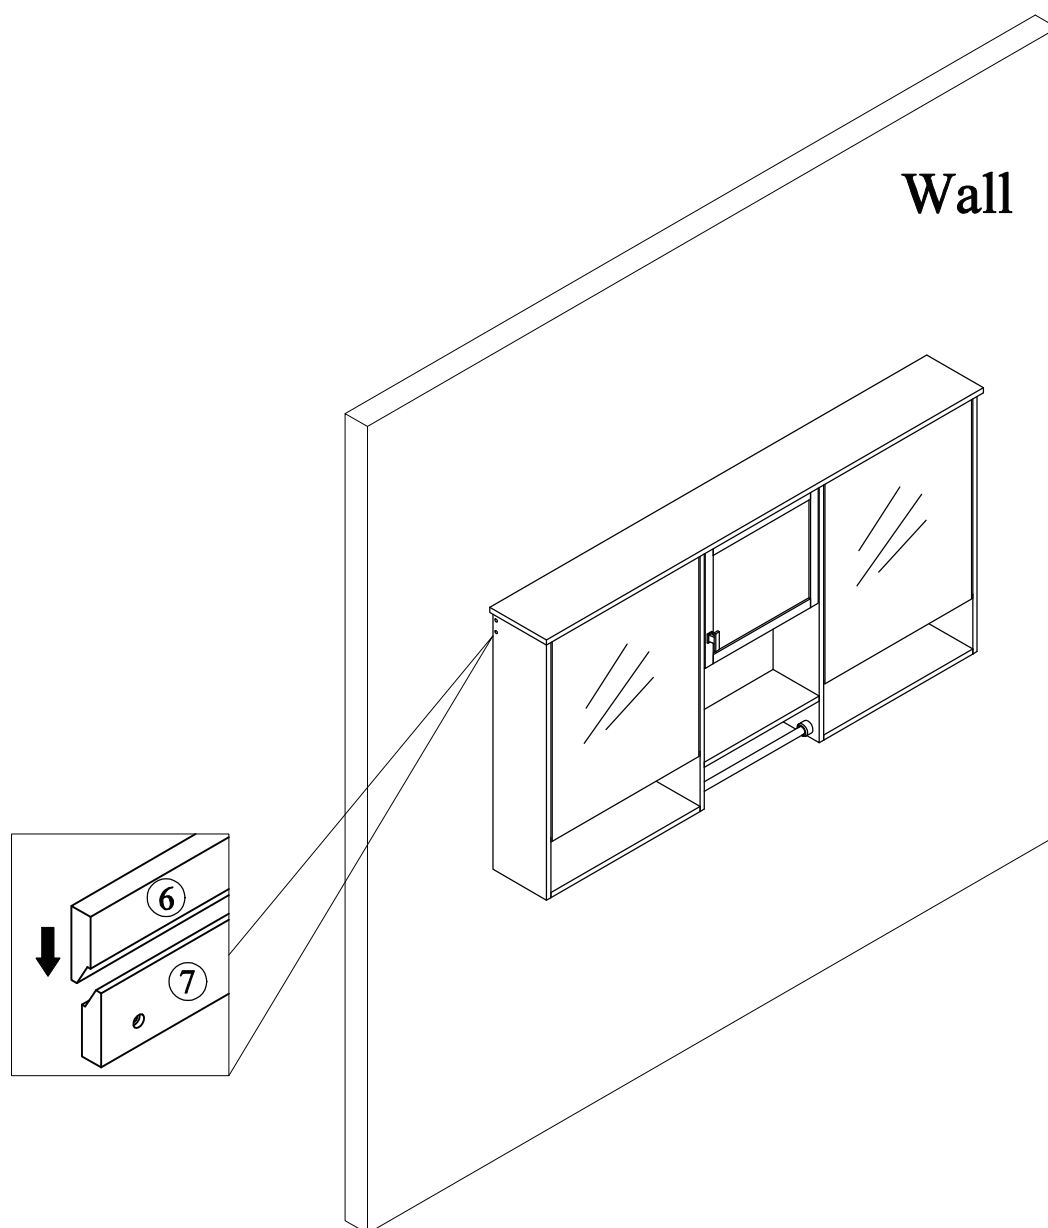

STEP: 15

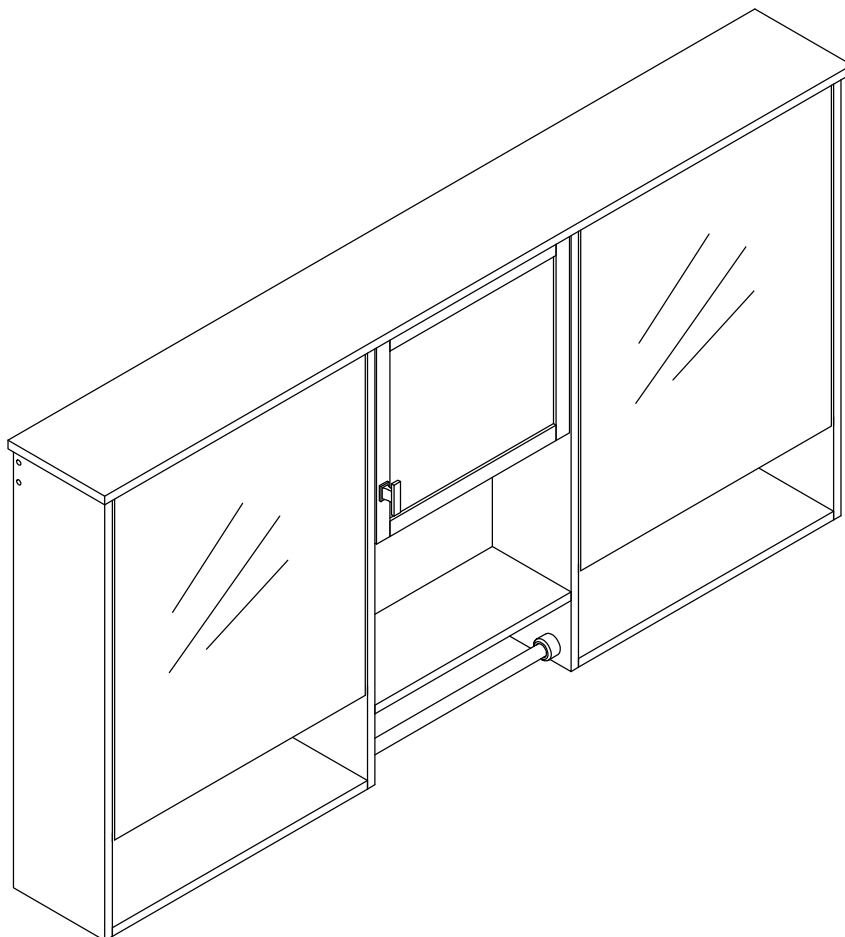

HINGE ADJUSTMENTS

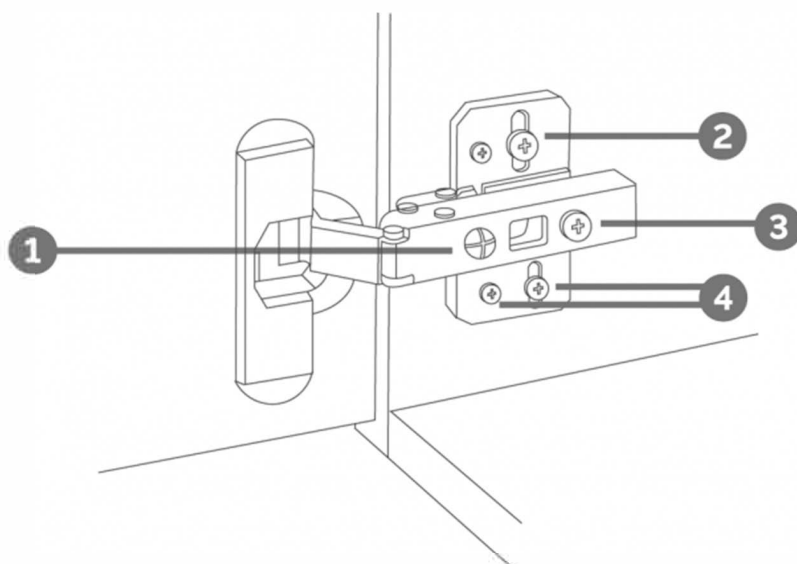


① Sideways / Tilt adjustment

Turn the screw

clockwise to move the door further away from the side of the cabinet

anticlockwise to move the door closer to the side of the cabinet

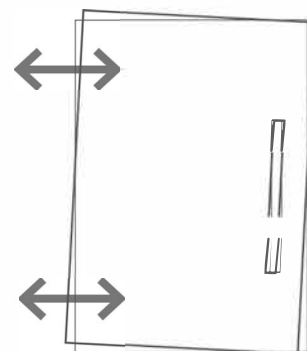


② ④ Height adjustment

While supporting the weight of the door, turn the screws

clockwise to move the door up

anticlockwise to move the door down

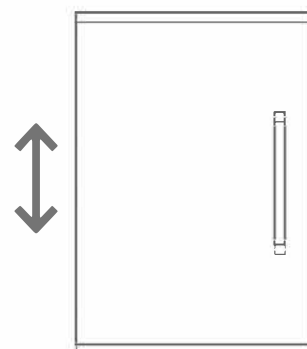

③ Forward and back adjustment

If the gap between the back of the door and the cabinet is too small, and the door may not close fully. Turn the screw

clockwise to decrease the gap between the door and the cabinet

anticlockwise to increase the gap between the door and the cabinet

